

conga-QMX8-Plus

Qseven® 2.1 Module with NXP® i.MX 8M Plus Processors

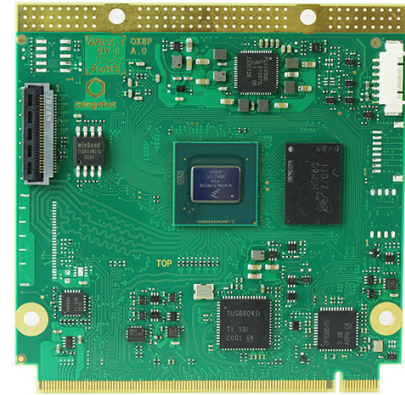

User's Guide

Revision 1.02

Revision History

Revision	Date (yyyy-mm-dd)	Author	Changes
0.1	2022-02-15	BEU	<ul style="list-style-type: none">• Preliminary release
0.2	2022-11-22	BEU	<ul style="list-style-type: none">• Updated picture of module on title page• Added CAN column to table 1 and 2• Added CAN information for industrial and commercial variants to table 4 and section 5.11 "CAN Bus"• Updated max. onboard LPDDR4 memory to 8 GByte in table 4 and section 6.6 "LPDDR4 Memory"• Updated description of power modes in Table 5 "Measurement Description"• Added power consumption values for industrial modules to Table 6 "Power Consumption Values"• Updated max. voltage from 3.6V to 3.3V in section 2.6 "Supply Voltage Battery Power"• Updated block diagram in section 3 "Block Diagram"• Added note about PCIe Gen 3 speed limitation in combination with suspend mode to section 5.1 "PCI Express"• Updated section 5.3 "Gigabit Ethernet"• Added assembly option for PCIe clock from SoC to section 5.1 "PCI Express"• Renamed section 5.2 "UART/RS-232" to "UART" and updated it• Added note about SuperSpeed extension signal compatibility to section 5.5 "USB"• Renamed section 5.6 "SD/SDIO/MMC" to "SDIO" and updated it• Renamed section 5.7 "HDA/I2S/AC'97" to "I2S" and updated it• Updated section 5.8 "Display Interfaces"• Renamed section 5.9 "LPC/GPIO" to "GPIO"• Removed PU / PD column from table 12• Removed unnecessary information from section 5.10 "SPI"• Added signal information to section 5.17 "I2C Bus"• Renamed section 6.1 "UART/RS-232 Debug Port" to "RS-232 Debug Port" and updated it• Added image showing interface designators to section 6 "Onboard Interfaces and Devices"• Updated connector in section 6.3 "JTAG Interface"
1.00	2023-06-15	BEU	<ul style="list-style-type: none">• Updated title page• Updated RoHS information in preface section• Added missing power consumption values and updated older values in table 6 and 7• Added missing inrush and peak power values to section 5.13 "Power Control"
1.01	2023-10-03	BEU	<ul style="list-style-type: none">• Corrected HW Revision B.4 to A.3 in table 6• Added note regarding long-term storage to section 2.7 "Environmental Specifications"• Added note regarding long-term storage to section 4 "Heatspreader"
1.02	2024-01-02	BEU	<ul style="list-style-type: none">• Updated note in section 2.7 "Environmental Specifications"

Preface

This user's guide provides information about the components, features and connectors available on the conga-QMX8-Plus. It is one of five documents that should be referred to when designing an NXP® i.MX 8M Plus based Qseven® application. The other reference documents that should be used include the following:

conga-QMX8-Plus Pinout (see section 7 "Signal Descriptions and Pinout Tables")

Qseven® Design Guide 2.0 (www.sget.org)

Qseven® Specification 2.1 (www.sget.org)

NXP® i.MX 8M Plus Applications Processor Datasheet for Industrial Products (www.nxp.com)

Software Licenses

Notice Regarding Open Source Software

The congatec products contain Open Source software that has been released by programmers under specific licensing requirements such as the "General Public License" (GPL) Version 2 or 3, the "Lesser General Public License" (LGPL), the "ApacheLicense" or similar licenses.

You can find the specific details at <https://www.congatec.com/en/licenses/>.

Enter the following command "license" in the bootloader to get the complete product related license information.

To the extent that any accompanying material such as instruction manuals, handbooks etc. contain copyright notices, conditions of use or licensing requirements that contradict any applicable Open Source license, these conditions are inapplicable. The use and distribution of any Open Source software contained in the product is exclusively governed by the respective Open Source license.

The Open Source software is provided by its programmers without ANY WARRANTY, whether implied or expressed, of any fitness for a particular purpose, and the programmers DECLINE ALL LIABILITY for damages, direct or indirect, that result from the use of this software.

congatec's liability with regards to the open source Software is as set out in congatec's Software License Information.

Disclaimer

The information contained within this user's guide, including but not limited to any product specification, is subject to change without notice.

congatec GmbH provides no warranty with regard to this user's guide or any other information contained herein and hereby expressly disclaims any implied warranties of merchantability or fitness for any particular purpose with regard to any of the foregoing. congatec GmbH assumes no liability for any damages incurred directly or indirectly from any technical or typographical errors or omissions contained herein or for discrepancies between the product and the user's guide. In no event shall congatec GmbH be liable for any incidental, consequential, special, or exemplary damages, whether based on tort, contract or otherwise, arising out of or in connection with this user's guide or any other information contained herein or the use thereof.

Intended Audience

This user's guide is intended for technically qualified personnel. It is not intended for general audiences.

RoHS Directive

All congatec GmbH designs comply with EU RoHS Directive 2011/65/EU and Delegated Directive 2015/863.

Electrostatic Sensitive Device



All congatec GmbH products are electrostatic sensitive devices. They are enclosed in static shielding bags, and shipped enclosed in secondary packaging (protective packaging). The secondary packaging does not provide electrostatic protection.

Do not remove the device from the static shielding bag or handle it, except at an electrostatic-free workstation. Also, do not ship or store electronic devices near strong electrostatic, electromagnetic, magnetic, or radioactive fields unless the device is contained within its original packaging. Be aware that failure to comply with these guidelines will void the congatec GmbH Limited Warranty.

Symbols

The following symbols are used in this user's guide:



Warning

Warnings indicate conditions that, if not observed, can cause personal injury.



Caution

Cautions warn the user about how to prevent damage to hardware or loss of data.



Note

Notes call attention to important information that should be observed.

Copyright Notice

Copyright © 2022, congatec GmbH. All rights reserved. All text, pictures and graphics are protected by copyrights. No copying is permitted without written permission from congatec GmbH. congatec GmbH has made every attempt to ensure that the information in this document is accurate yet the information contained within is supplied "as-is".

Trademarks

Product names, logos, brands, and other trademarks featured or referred to within this user's guide, or the congatec website, are the property of their respective trademark holders. These trademark holders are not affiliated with congatec GmbH, our products, or our website.

Warranty

congatec GmbH makes no representation, warranty or guaranty, express or implied regarding the products except its standard form of limited warranty ("Limited Warranty") per the terms and conditions of the congatec entity, which the product is delivered from. These terms and conditions can be downloaded from www.congatec.com. congatec GmbH may in its sole discretion modify its Limited Warranty at any time and from time to time.

The products may include software. Use of the software is subject to the terms and conditions set out in the respective owner's license agreements, which are available at www.congatec.com and/or upon request.

Beginning on the date of shipment to its direct customer and continuing for the published warranty period, congatec GmbH represents that the products are new and warrants that each product failing to function properly under normal use, due to a defect in materials or workmanship or due to non conformance to the agreed upon specifications, will be repaired or exchanged, at congatec's option and expense.

Customer will obtain a Return Material Authorization ("RMA") number from congatec GmbH prior to returning the non conforming product freight prepaid. congatec GmbH will pay for transporting the repaired or exchanged product to the customer.

Repaired, replaced or exchanged product will be warranted for the repair warranty period in effect as of the date the repaired, exchanged or replaced product is shipped by congatec, or the remainder of the original warranty, whichever is longer. This Limited Warranty extends to congatec's direct customer only and is not assignable or transferable.

Except as set forth in writing in the Limited Warranty, congatec makes no performance representations, warranties, or guarantees, either express or implied, oral or written, with respect to the products, including without limitation any implied warranty (a) of merchantability, (b) of fitness for a particular purpose, or (c) arising from course of performance, course of dealing, or usage of trade.

congatec GmbH shall in no event be liable to the end user for collateral or consequential damages of any kind. congatec shall not otherwise be liable for loss, damage or expense directly or indirectly arising from the use of the product or from any other cause. The sole and exclusive remedy against congatec, whether a claim sound in contract, warranty, tort or any other legal theory, shall be repair or replacement of the product only.

Certification

congatec GmbH is certified to DIN EN ISO 9001 standard.



Technical Support

congatec GmbH technicians and engineers are committed to providing the best possible technical support for our customers so that our products can be easily used and implemented. We request that you first visit our website at www.congatec.com for the latest documentation, utilities and drivers, which have been made available to assist you. If you still require assistance after visiting our website then contact our technical support department by email at support@congatec.com.

Terminology

Term	Description
°C	Degrees Celsius
µA	Microamp
µs	Microsecond
A	Ampere
AN	Application Note
ARM	Advanced RISC Machine
AVB	Audio Video Bridging
BT	Bluetooth
CAAM	Cryptographic Acceleration and Assurance Module
CMOS	Complementary Metal Oxide Semiconductor
COM	Computer-on-Module
CPU	Central Processing Unit
CSI	Camera Serial Interface
CSP	Cooling Solution Passive
DDR	Double Data Rate
DP	DisplayPort
DP++	DisplayPort Dual-Mode
DRAM	Dynamic Random Access Memory
DSI	Display Serial Interface
D-SUB	D-Subminiature
eMMC	embedded MultiMediaCard
eSPI	enhanced Serial Peripheral Interface
FlexCAN	Flexible Controller Area Network
GB	Gigabyte
GbE	Gigabit Ethernet
GHz	Gigahertz
GND	Ground
GPIO	General-Purpose Input/Output
GPU	Graphics Processing Unit
GTps	Gigatransfers per second
HDMI	High-Definition Multimedia Interface
HW	Hardware
HAB	High Assurance Boot

HSP	Heat Spreader
Hz	Hertz
I/O	Input/Output
I ² C (I2C)	Inter-Integrated Circuit
I ² S (I2S)	Inter-Integrated Circuit Sound
IEEE	Institute of Electrical and Electronics Engineers
JEIDA	Japan Electronic Industries Development Association
JTAG	Joint Test Action Group
KS	Key State
LPDDR	Low-Power Double Data Rate
LVDS	Low-Voltage Differential Signaling
Mbps	Megabits per second
MBps	Megabytes per second
MHz	Megahertz
mm	Millimeter
MMU	Memory Management Unit
mVpp	Millivolts Peak to Peak
MXM	Mobile PCI Express Module
NC	Not Connected
Nm	Newton metre
NXP	NeXt exPerience
OS	Operating System
OTG	On-The-Go
PCB	Printed Circuit Board
PCI Express	Peripheral Component Interconnect Express
PHY	Physical Layer
PMIC	Power Management Integrated Circuit
PN	Part Number
QSPI	Quad Serial Peripheral Interface
RGMI	Reduced Gigabit-Media Independent Interface
RS-232	Recommended Standard 232
RTC	Real-Time Clock

SAI	Synchronous Audio Interface
SD	Secure Digital
SDIO	Secure Digital Input Output
SDR	Single Data Rate
SDRAM	Synchronous Dynamic Random Access Memory
SDXC	Secure Digital eXtended Capacity
SGET	Standardization Group for Embedded Technologies e.V
SMARC	Smart Mobility ARChitecture
SoC	System on Chip
SNVS	Secure Non-Volatile Storage
SPI	Serial Peripheral Interface
TBD	To Be Defined
TMU	Thermal Management Unit
UART	Universal Asynchronous Receiver-Transmitter
U-Boot	Universal Boot Loader
UHS	Ultra High Speed
USB	Universal Serial Bus
uSDHC	Ultra Secure Digital Host Controller
V	Volt
Vdc	Volts direct current
VESA	Video Electronics Standards Association
W	Watt
Wi-Fi	Wireless Fidelity

Contents

1	Introduction	10	5.7	I2S	24
1.1	Qseven® Concept	10	5.8	Display Interfaces	24
1.2	conga-QMX8-Plus	10	5.8.1	LVDS and optional MIPI DSI®	24
1.3	Options Information	11	5.8.2	HDMI®	25
1.4	Accessories	11	5.9	GPIO	25
2	Specifications	12	5.10	SPI	26
2.1	Feature List	12	5.11	CAN Bus	26
2.2	Supported Operating Systems	13	5.12	Manufacturing/JTAG Interface	26
2.3	Mechanical Dimensions	13	5.13	Power Control	27
2.4	Supply Voltage Standard Power	14	5.14	Power Management	29
2.4.1	Electrical Characteristics	14	5.15	Thermal Management	29
2.4.2	Rise Time	14	5.16	Watchdog	29
2.5	Power Consumption	15	5.17	I2C Bus	29
2.6	Supply Voltage Battery Power	16	5.18	Boot Select	30
2.6.1	CMOS Battery Power Consumption	16	5.18.1	Serial Downloader Mode	30
2.7	Environmental Specifications	17	6	Onboard Interfaces and Devices	31
3	Block Diagram	18	6.1	RS-232 Debug Ports	32
4	Heatspreader	19	6.2	MIPI CSI-2® Camera Connectors	32
4.1	Heatspreader Dimensions	20	6.3	JTAG Interface	33
5	Connector Subsystems	21	6.4	SPI Flash	33
5.1	PCI Express®	21	6.5	Android Buttons	34
5.2	UART	21	6.6	LPDDR4 Memory	34
5.3	Gigabit Ethernet	22	6.7	eMMC	34
5.4	SATA	22	6.8	Micro SD	35
5.5	USB	23	6.9	RTC	35
5.6	SDIO	23	7	Signal Descriptions and Pinout Tables	36
			8	Software Documentation	37

List of Tables

Table 1	Commercial Variants	11
Table 2	Industrial Variants.....	11
Table 3	Accesories.....	11
Table 4	Feature Summary	12
Table 5	Measurement Description.....	15
Table 6	Power Consumption Values	15
Table 7	CMOS Battery Power Consumption	16
Table 8	Heatspreader Variants.....	19
Table 9	Overview of SoC UART Ports.....	21
Table 10	Overview of USB Ports.....	23
Table 11	Overview of Display Interfaces	24
Table 12	Overview of GPIO[0:7] Pins.....	25
Table 13	Power States	29
Table 14	Boot Select (Prototype Revisions)	30
Table 15	RS-232 Debug Ports (X4) Signal Descriptions.....	32
Table 16	JTAG Debug Interface (X5) Signal Descriptions	33
Table 17	Android Buttons (X7) Signal Descriptions.....	34

1 Introduction

1.1 Qseven® Concept

The Qseven® concept is an off-the-shelf, multi vendor, Computer-On-Module that integrates all the core components of a common PC and is mounted onto an application specific carrier board. Qseven® modules have a standardized form factor of 70mm x 70mm and a specified pinout based on the high speed MXM system connector. The pinout remains the same regardless of the vendor. The Qseven® module provides the functional requirements for an embedded application. These functions include, but are not limited to, graphics, sound, mass storage, network interface and multiple USB ports.

A single ruggedized MXM connector provides the carrier board interface to carry all the I/O signals to and from the Qseven® module. This MXM connector is a well known and proven high speed signal interface connector that is commonly used for high speed PCI Express® graphics cards in notebooks.

Carrier board designers can use as little or as many of the I/O interfaces as deemed necessary. The carrier board can therefore provide all the interface connectors required to attach the system to the application specific peripherals. This versatility allows the designer to create a dense and optimized package, which results in a more reliable product while simplifying system integration.

The conga-QEVAL/Qseven® 2.0 evaluation carrier board provides carrier board designers with a reference design platform and the opportunity to test all the Qseven® I/O interfaces available and then choose what are suitable for their application. Qseven® applications are scalable, which means once a carrier board has been created there is the ability to diversify the product range through the use of different performance class Qseven® modules. Simply unplug one module and replace it with another, no need to redesign the carrier board.

1.2 conga-QMX8-Plus

The conga-QMX8-Plus is a Computer On Module (COM) based on the Qseven® Hardware Specification 2.1. The conga-QMX8-Plus features an NXP® i.MX 8M Plus applications processor with four Arm® Cortex®-A53 processor cores, one Arm® Cortex®-M7 processor and an integrated 2.3 TOPS Neural Processing Unit (NPU) for machine learning applications. The System on Chip (SoC) is manufactured using the 14nm LPC FinFET technology for high computing performance at low power. The conga-QMX8-Plus only requires 2 - 5 W @ 5V for typical applications.

By offering most of the functional requirement for any Qseven® application, the conga-QMX8-Plus provides manufacturers and developers with a platform to jump-start the development of systems and applications based on Qseven® Hardware Specification. Its features and capabilities make it an ideal platform for designing compact, energy-efficient, performance-oriented embedded systems.

1.3 Options Information

The conga-QMX8-Plus is currently available in two commercial and two industrial variants. The two tables below show the base configuration modules that are currently offered by congatec GmbH.

Table 1 Commercial Variants

PN	016600	016601
NXP® Processor	i.MX 8M Plus Quad	i.MX 8M Plus Quad
Cortex®-A53	4x 1.8 GHz	4x 1.8 GHz
DRAM	4 GB LPDDR4 @ 2000 MHz (32 bit) with In-line ECC	2 GB LPDDR4 @ 2000 MHz (32 bit) with In-line ECC
eMMC	16 GB	16 GB
CAN	1x CAN	1x CAN

Table 2 Industrial Variants

PN	016620	016621
NXP® Processor	i.MX 8M Plus Quad	i.MX 8M Plus Quad
Cortex®-A53	4x 1.6 GHz	4x 1.6 GHz
DRAM	4 GB LPDDR4 @ 2000 MHz (32 bit) with In-line ECC	2 GB LPDDR4 @ 2000 MHz (32 bit) with In-line ECC
eMMC	16 GB	16 GB
CAN	1x CAN-FD	1x CAN-FD

1.4 Accessories

Table 3 Accesories

PN	Product Name	Description
007005	conga-QEVAL/Qseven 2.0 ARM	Evaluation carrier board for Qseven® ARM modules.
500025	conga-HDMI add-on card	conga-HDMI add on card is used for evaluation of the HDMI® graphics interface of Qseven® modules in combination with the congatec evaluation carrier board conga-QEVAL.
48000023	RS232 adapter cable for conga-ARM modules	RS232 adapter cable for congatec ARM modules console debug application
44500041	Basler dart camera daA3840-30mc	Basler dart BCON for MIPI camera module daA3840-30mc, 8Mpx, 30fps, 4 CSI2-Lanes, S-Mount
10000399	FFC Basler dart BCON for MIPI, 200mm	FFC 28 pin cable for Basler BCON dart cameras, 0,5mm pitch. compatible with 28 pin Hirose ZIF connector (PN: FH41-28S-0.5SH(05))
10000429	Evetar Lens M118B0418IR F1.8 f4mm 1/1.8" - Lens	Evetar Lens M118B0418IR F1.8 f4mm 1/1.8" - Lens for Basler dart camera module daA3840-30mc

2 Specifications

2.1 Feature List

Table 4 Feature Summary

Form Factor	Qseven® Specification 2.1	
SoC	NXP® i.MX 8M Plus Quad: 4x Arm® Cortex®-A53 cores @ 1.8 GHz (commercial) or 1.6 GHz (industrial) 1x Arm® Cortex®-M7 @ 800MHz NPU 2.3 TOPS GPU GC7000UL	
DRAM	Up to 8 GByte onboard LPDDR4 memory 4000 MT/s In-line ECC	
AI & Machine Learning	Neural Processing Unit (NPU) with up to 2.3 TOPS NXP® eIQ Machine Learning SW tools and libraries	
Ethernet	1x Gbit Ethernet with IEEE 1588 and TSN Support	
I/O Interfaces	1x dual-role USB 3.0 3x USB 2.0 1x USB 3.0 1x SDIO 3.0 1x onboard µSD card socket 1x PCIe® 3.0	2x I²C 1x SPI 1x UART with Handshake 1x CAN (commercial) CAN-FD (industrial) 12x GPIOs
Mass Storage	eMMC 5.1 up to 128 GByte SPI NOR Flash up to 32 MByte	
Sound	1x I²S HiFi 4 DSP	
Graphics	Integrated in SoC GC7000UL 3D graphics with 2 high performance vec4 shaders GC520L 2D graphics VPU up to 1080p60 H.265/H.264 decoding and encoding OpenGL ES 3.1 Vulkan OpenCL 1.2 FP OpenVG 1.1 2 independent displays	
Video Interfaces	1x dual channel 24-bit LVDS 1x MIPI-DSI 4-lane shared with second LVDS channel (optional) 1x HDMI 2.0a	Up to 2x MIPI-CSI 4-lane onboard connectors 2x integrated Image Signal Processor (ISP) for cameras with up to 12 MP
Features	Watchdog Timer Cortex®-A53 Console optional JTAG debug interface High Precision Real Time Clock	
Security	Cryptographic Acceleration and Assurance Module (CAAM) Resource Domain Controller ARM® TrustZone® High Assurance Boot support Encryption Engine AES-128/192/256, DES/3DES, RC4, RSA4096, TRNG SHA-1/244/256, MD-5 RSA-1024, 2048, 3072, 4096 and secure key storage side channel attack resistance	
Boot Loader	U-Boot boot loader	
Operating Systems	Linux® (Yocto Project®) Android™	
Power Consumption	Typical application 2-5W @ 5V	
Temperature Range	Operating Temperature Range: 0 to +60°C commercial grade -40 to +85°C industrial grade Storage Temperature Range: -40 to +85°C	
Humidity	Operating: 10 to 90% r. H. non cond. Storage: 5 to 95% r. H. non cond.	
Size	70 mm x 70 mm	


2.2 Supported Operating Systems

The conga-QMX8-Plus supports the following operating systems:

- Linux® (Yocto Project®)
- Android™

2.3 Mechanical Dimensions


- 70.0 mm x 70.0 mm
- The Qseven® module, including the heatspreader plate, PCB thickness and bottom components, is up to approximately 12 mm thick.

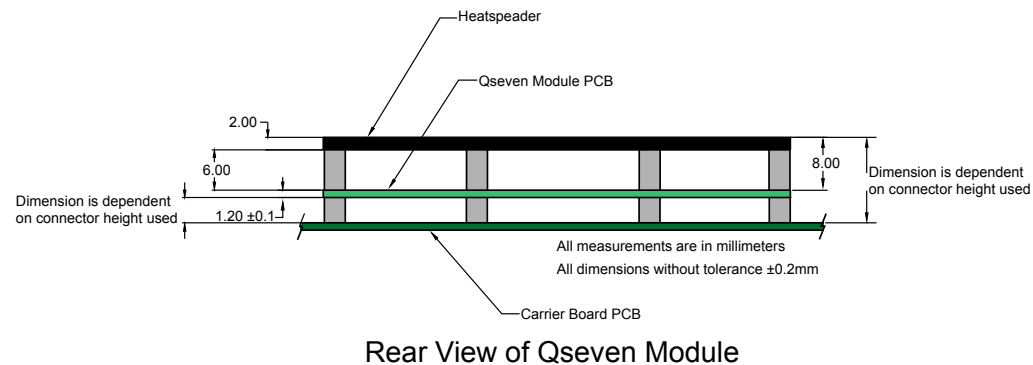

2.4 Supply Voltage Standard Power

- 5V DC \pm 5%

The dynamic range shall not exceed the static range.

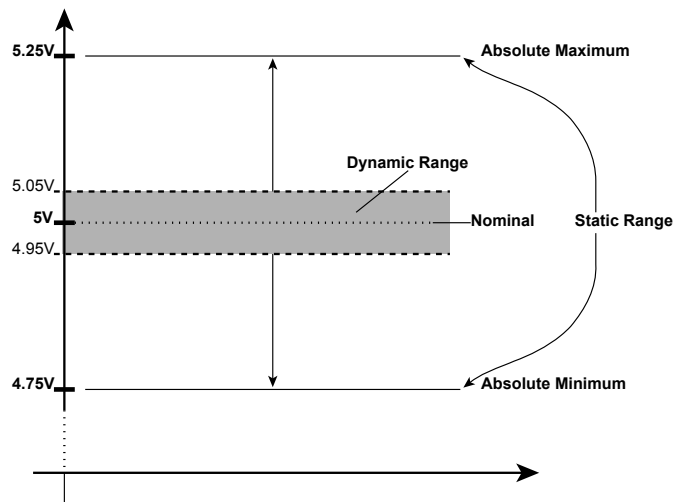

2.4.1 Electrical Characteristics

Characteristics			Min.	Typ.	Max.	Units	Comment
5V	Voltage	\pm 5%	4.75	5.00	5.25	Vdc	
	Ripple		-	-	\pm 50	mV _{PP}	0-20MHz
	Current						
5V_SB	Voltage	\pm 5%	4.75	5.00	5.25	Vdc	
	Ripple				\pm 50	mV _{PP}	

2.4.2 Rise Time

The input voltages shall rise from 10 percent of nominal to 90 percent of nominal at a minimum slope of 250 V/s. The smooth turn-on requires that, during the 10 percent to 90 percent portion of the rise time, the slope of the turn-on waveform must be positive.



For information about the input power sequencing of the Qseven® module, refer to the Qseven® specification.

2.5 Power Consumption

The power consumption values were measured with the following setup:

- Input voltage +5 V
- conga-QMX8-Plus
- conga-QEVAL carrier board
- conga-QMX8-Plus cooling solution

The power consumption values were recorded during the following operating modes:

Table 5 Measurement Description

Mode	Description	Comment
Suspend	Lowest power state with external supplies on	For more information about the modes, refer to the AN13054 "i.MX 8M Plus Power Consumption Measurement" available at the NXP® website www.nxp.com .
Idle	IDLE_DEFAULT without display	
100%	100% CPU and GPU workload	The CPU and GPU were stressed to their maximum frequency with stress-ng and GImark2.
Peak	100% CPU and GPU workload at ~100°C peak power consumption	Consider this value when designing the system's power supply to ensure that sufficient power is supplied during worst case scenarios.

The table below provides the power consumption values of each conga-QMX8-Plus variant during different operating modes:

Table 6 Power Consumption Values

PN	Memory Size	HW Revision	U-Boot	OS	SoC	Current (A) @ 5 V			
						Suspend	Idle	100%	Peak
016600	4 GB	A.3	2022.04	Yocto Kirkstone 5.15	i.MX 8M Plus Quad (1.8 GHz)	0.14	0.56	1.01	1.13
016601	2 GB	A.3	2022.04	Yocto Kirkstone 5.15	i.MX 8M Plus Quad (1.8 GHz)	0.15	0.55	1.00	1.08
016620	4 GB	A.3	2020.04	Yocto Zeus 5.4	i.MX 8M Plus Quad (1.6 GHz)	0.15	0.55	0.99	1.16
016621	2 GB	A.3	2020.04	Yocto Zeus 5.4	i.MX 8M Plus Quad (1.6 GHz)	0.15	0.54	0.99	1.14

2.6 Supply Voltage Battery Power

- 2.0V - 3.3V DC
- Typical 3V DC

2.6.1 CMOS Battery Power Consumption

Table 7 CMOS Battery Power Consumption

RTC @	Voltage	Current
-40°C	3V DC	1.10 μ A
0°C	3V DC	1.18 μ A
20°C	3V DC	1.23 μ A
60°C	3V DC	1.48 μ A
85°C	3V DC	2.31 μ A



Note

1. Do not use the CMOS battery power consumption values listed above to calculate CMOS battery lifetime.
2. Measure the CMOS battery power consumption in your customer specific application in worst case conditions (for example, during high temperature and high battery voltage).
3. Consider the self-discharge of the battery when calculating the lifetime of the CMOS battery. For more information, refer to application note AN9_RTC_Battery_Lifetime.pdf at www.congatec.com/support/application-notes



Note

To improve the lifetime of the CMOS battery, congatec implemented an external real-time clock onboard the conga-QMX8-Plus module.

2.7 Environmental Specifications

Temperature (commercial variants)	Operation: 0° to 60°C	Storage: -40° to +85°C
Temperature (industrial variants)	Operation: -40° to 85°C	Storage: -40° to +85°C
Humidity	Operation: 10% to 90%	Storage: 5% to 95%



Caution

1. The above operating temperatures must be strictly adhered to at all times. When using a congatec heatspreader, the maximum operating temperature refers to any measurable spot on the heatspreader's surface.
2. Humidity specifications are for non-condensing conditions.




Note

For long term storage of the conga-QMX8-Plus (more than six months), keep the conga-QMX8-Plus in a climate-controlled building at a constant temperature between 5°C and 40°C, with humidity of less than 65% and at an altitude of less than 3000 m. Also ensure the storage location is dry and well ventilated.

We do not recommend storing the conga-QMX8-Plus for more than five years under these conditions.

3 Block Diagram

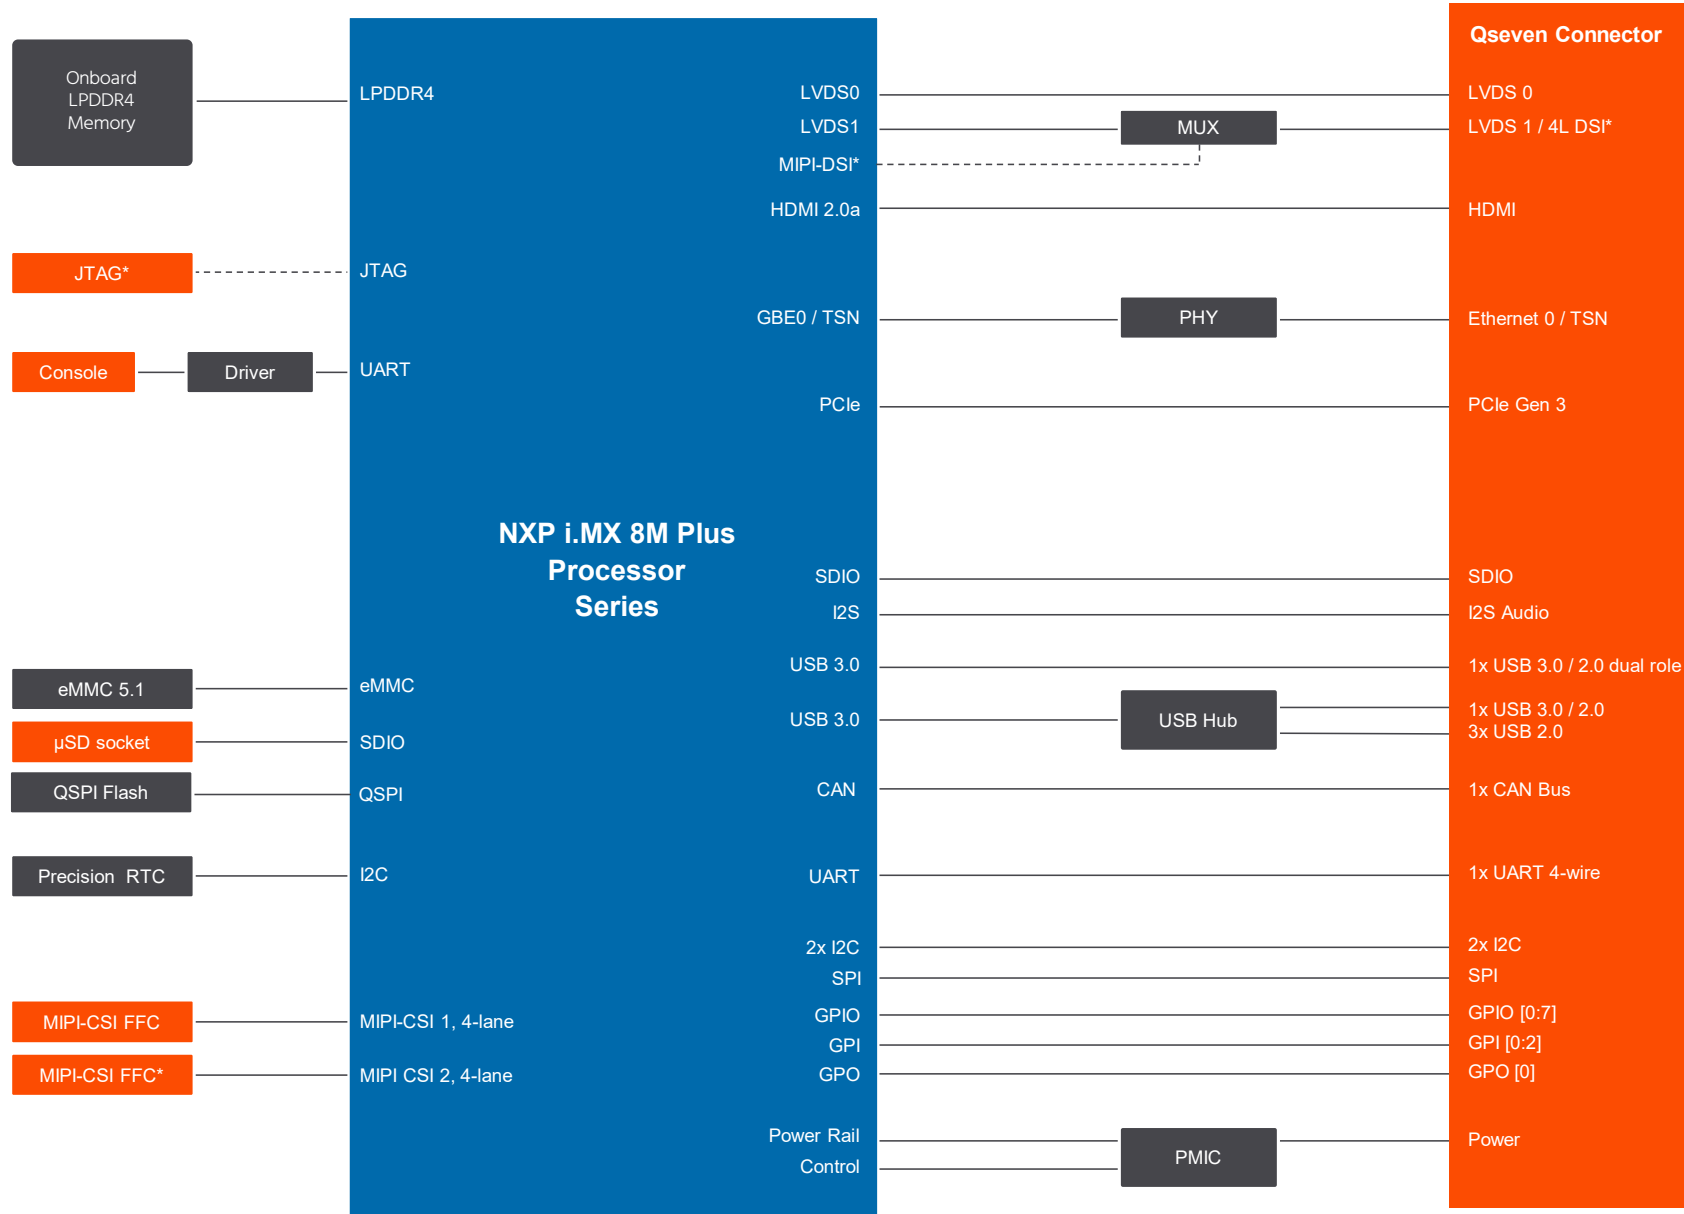

* Assembly Option

4 Heatspreader

congatec GmbH offers the following heatspreader variants for the conga-QMX8-Plus. Each heatspreader variant is intended for specific module variants as shown in the table below. The dimensions of the heatspreader are shown in the sub-sections. All measurements are in millimeters.

Table 8 Heatspreader Variants

Heatspreader Variant	Heatspreader Part No. (PN)	Compatible conga-QMX8-Plus Variants (PN)	Description
conga-QMX8-Plus/HSP-T	016650	016620, 016621	Standard heatspreader for Qseven module conga-QMX8-Plus with NXP i.MX 8M Plus ARM processor. All standoffs are M2.5 thread.
conga-QMX8-Plus/HSP-B	016651	016620, 016621	Standard heatspreader for Qseven module conga-QMX8-Plus with NXP i.MX 8M Plus ARM processor. All standoffs are with 2.7mm bore hole.



Note

1. We recommend a maximum torque of 0.4 Nm for carrier board and module mounting screws.
2. The gap pad material used on congatec heatspreaders may contain silicon oil that can seep out over time depending on the environmental conditions it is subjected to. For more information about this subject, contact your local congatec sales representative and request the gap pad material manufacturer's specification.
3. Only a few NXP® i.MX 8M Plus on-chip devices are enabled by default in the bootloader. With this default configuration, the power consumption is low. However, power consumption may increase significantly depending on your application and the workload.
4. For optimal thermal dissipation, do not store the congatec cooling solutions for more than six months.






Caution

1. The congatec heatspreaders/cooling solutions are tested only within the commercial temperature range of 0° to 60°C. Therefore, if your application that features a congatec heatspreader/cooling solution operates outside this temperature range, ensure the correct operating temperature of the module is maintained at all times. This may require additional cooling components for your final application's thermal solution.
2. For adequate heat dissipation, use the mounting holes on the cooling solution to attach it to the module. Apply thread-locking fluid on the screws if the cooling solution is used in a high shock and/or vibration environment. To prevent the standoff from stripping or cross-threading, use non-threaded carrier board standoffs to mount threaded cooling solutions.
3. For applications that require vertically-mounted cooling solution, use only coolers that secure the thermal stacks with fixing post. Without the fixing post feature, the thermal stacks may move.
4. Do not exceed the recommended maximum torque. Doing so may damage the module or the carrier board, or both.

4.1 Heatspreader Dimensions

PN: 016650, 016651

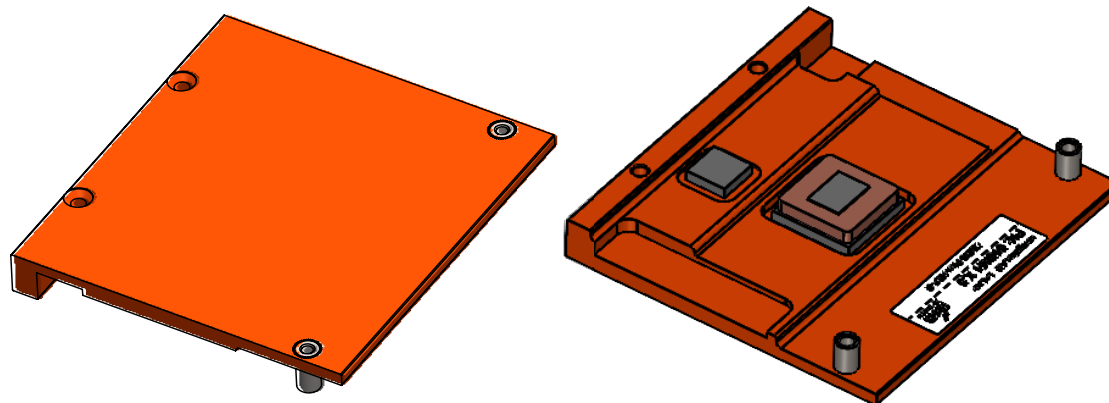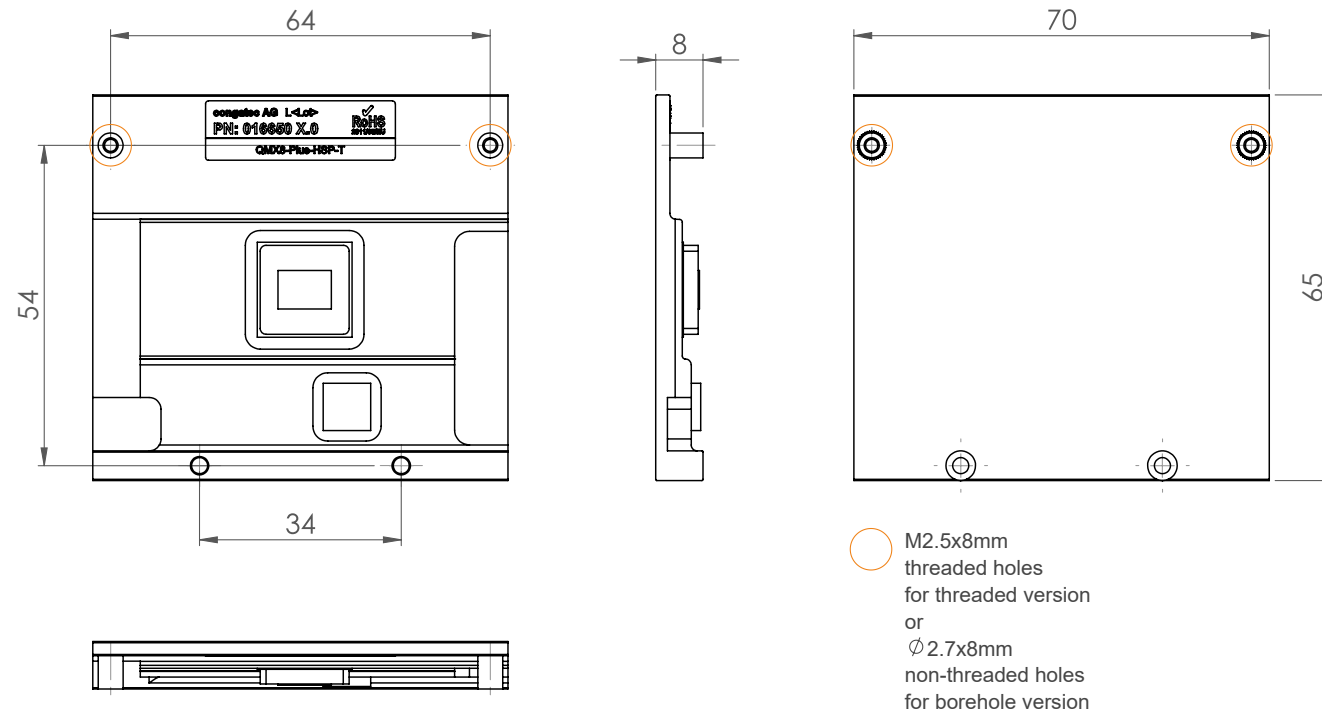

5 Connector Subsystems

The conga-QMX8-Plus is based on the Qseven® standard and therefore has 115 edge fingers on the top and bottom side of the module that mate with the 230-pin card-edge MXM connector located on the carrier board. This connector provides the ability to interface the available signals of the conga-QMX8-Plus with the carrier board peripherals.

5.1 PCI Express®

The conga-QMX8-Plus offers one PCI Express® (PCIe®) lane. Only x1 PCIe® link configuration is possible.

The PCIe® signals are routed from the NXP® i.MX 8M Plus processor to the PCIe® port 0 of the conga-QMX8-Plus edge finger. These signals support PCI Express® Gen 3 interfaces at 8 Gb/s and are backward compatible to Gen 2 interfaces at 5 Gb/s and Gen 1.1 interfaces at 2.5 Gb/s.

The PCIe® reference clock is generated by an onboard precision oscillator (Microchip DSC557-03) by default. Optionally, the reference clock can be generated by the SoC (assembly option).



Note

The PCIe® speed is limited to Gen 2 in the default DTB configuration. Enable PCIe® Gen 3 only if the system will never enter suspend mode.

5.2 UART

The conga-QMX8-Plus offers one UART interface by default. The UART is fully featured with control signals (4 pin UART) and supports 7- or 8-bit data words, 1 or 2 stop bits, programmable parity (even, odd, or none), programmable baud rates up to 4 Mbps, 32-byte FIFO on Tx and 32 half-word FIFO on Rx supporting auto-baud. The UART is connected directly to the UART1 port of the NXP® i.MX 8M Plus Cortex®-A53 processor.

The table below shows how the UART ports of the SoC are connected to Qseven® pins and the onboard connector X4.

Table 9 Overview of SoC UART Ports

SoC	Qseven® Pins	Onboard Connector (X4)
UART1	UART0	
UART2	MFG (Optional) / RSVD Pins 54 and 55 (Assembly Option)	Cortex®-A53 Console (Default)
UART3	GPIO (Optional)	
UART4	RSVD Pins 52 and 53 (Assembly Option)	Cortex®-M7 Debug (Default)



Note

1. The UART interface on the MFG pins can be realized as described in the Qseven® Specification.
2. The MFG_NC4 pin is high active and has an internal pull down resistor on the conga-QMX8-Plus module. This means that the MFG pins on the edge connector functions as UART interface by default.
3. The UART interface on the GPIO pins is described in section 5.9 "GPIO".
4. The UART interfaces on the onboard connector X4 are described in section 6.1 "RS-232 Debug Ports".

5.3 Gigabit Ethernet

The conga-QMX8-Plus offers Gigabit Ethernet via an onboard TI DP83867 Physical Layer (PHY). This PHY is connected via the RGMII interface of the NXP® i.MX 8M Plus processor. The Ethernet interface consists of 4 pairs of low voltage differential pair signals designated from GBE0_MDI0± to GBE0_MDI3± plus control signals for link activity indicators. These signals can be used to connect to a 10/100/1000 BaseT RJ45 connector with integrated or external isolation magnetics on the carrier board.

The Gigabit Ethernet interface supports:

- 10/100/1000 Mbps
- Ethernet Audio Video Bridging (AVB)
- IEEE 1588v2 Precision Timing Protocol (PTP)
- Time Sensitive Networking (TSN)



Note

The 1588 event (default) or trigger (optional) signal is routed to Qseven® pin 124 "GP_1-Wire_Bus / HDMI_CEC".

5.4 SATA

The NXP® i.MX 8M Plus Cortex®-A53 processor does not support SATA. Therefore, the conga-QMX8-Plus does not support SATA.

5.5 USB

The conga-QMX8-Plus offers five USB ports via two USB 3.0 controllers with integrated PHYs provided by the NXP® i.MX 8M Plus Cortex®-A53 processor. These controllers provide USB functionality that comply with the USB 3.0 and USB 2.0 specification. OTG is not supported.

The offered ports comprise of two USB 3.0 (5 Gbps) ports, one of which is Dual-Role capable, and three USB 2.0 ports. One USB 3.0 ports and the three USB 2.0 ports are derived through the integration of a TI TUSB8041 USB hub, and are implemented by routing the USB2 port of the processor to the TI hub. The Dual-Role capable USB 3.0 port is connected directly to the USB1 port of the NXP® i.MX 8M Cortex®-A53 processor.

Table 10 Overview of USB Ports

Qseven	Default	Assembly Option (Without USB Hub)
USB_P0	USB 3.0 (5 Gbps)	USB 3.0 (5 Gbps)
USB_P1	USB 3.0 Dual-Role	USB 3.0 Dual-Role
USB_P2	USB 2.0	N/A
USB_P3	USB 2.0	N/A
USB_P4	USB 2.0	N/A



Note

1. USB_P1 can be used for the Serial Downloader mode. For more information, see section 5.18.1 "Serial Downloader Mode".
2. USB Port 1 SuperSpeed extension is connected according to Qseven® Specification 2.1. It is not backward compatible to Qseven® Specification 2.0.

5.6 SDIO

The conga-QMX8-Plus offers one SDIO interface on the Qseven® connector via the NXP® i.MX 8M SDHC1 port. The SDIO interface supports:

- OS boot (U-Boot not supported)
- SD/SDIO specification 3.0
- 200 MHz 1.8V signaling for up to 100 MBps
- Secure Digital eXtended Capacity (SDXC™) cards
- UHS-I (SDR104/50 and DDR50)
- Default Mode and High Speed Mode

5.7 I2S

The conga-QMX8-Plus provides the Inter-IC Sound (I²S) interface for audio codecs implemented on the carrier board. These signals are derived from the Synchronous Audio Interface module 5 (SAI5) of the NXP® i.MX 8M Plus processor.



Note

The conga-QMX8-Plus only supports the I²S interface.

5.8 Display Interfaces

The conga-QMX8-Plus supports up to three independent displays as listed in the table below:

Table 11 Overview of Display Interfaces

	Display 1		Display 2		Display 3	
	Interface	Max. Resolution	Interface	Max. Resolution	Interface	Max. Resolution
Default	Dual channel LVDS	1920x1080p60	-	-	HDMI®	3840x2160p30
Assembly Option	Single channel LVDS	1366x768p60	MIPI DSI®	2560x1440p60	HDMI®	3840x2160p30



Note

The MIPI® DSI interface only supports max. resolution 2560x1440p60 if it is the only display interface in use. Otherwise, the MIPI® DSI interface supports max. resolution 1920x1200p60.

5.8.1 LVDS and optional MIPI DSI®

The conga-QMX8-Plus offers LVDS_[A:B] pins for one 18 / 24 bit dual channel LVDS interface by default.

Optionally, the LVDS_B pins can be used for a one 4-lane MIPI DSI® interface instead (assembly option).



Note

The conga-QMX8-Plus does not support eDP™.

5.8.2 HDMI®

The conga-QMX8-Plus offers pins for one High-Definition Multimedia Interface (HDMI®) 2.0a display interface with support for multi-channel audio output. The supported resolutions are 720x480p60, 1280x720p60, 1920x1080p60, 1920x1080p120, and 3840x2160p30.

HDMI® is a licensable compact audio/video connector interface for transmitting uncompressed digital streams. HDMI® encodes the video data into TMDS for digital transmission and is backward-compatible with the single-link Digital Visual Interface (DVI) carrying digital video.

The conga-QMX8-Plus provides HDMI® connection directly from the NXP® i.MX 8M Plus processor. Video data is provided through three differential TMDS data pairs (TMDS_LANE0± to TMDS_LANE2±) and one differential clock pair (TMDS_CLK±). In addition, HDMI® includes a DDC (Digital Display Channel) interface for the configuration exchange and Hot plug detection signal.

5.9 GPIO

The conga-QMX8-Plus does not support the Low Pin Count (LPC) signals, instead eight General-Purpose Input/Output (GPIO) pins shared with the LPC pins according to Qseven® Specification 2.1 are supported.

The General Purpose Input/Output pins can be configured as inputs or outputs. When configured as output, it is possible to write to an internal register to control the state driven on the output pin. When configured as input, the input state can be detected by reading the status of an internal register. To select the GPIO mode, configure the IOMUX.

The conga-QMX8-Plus offers GPIO[0:7] pins for GPIO use with support for alternate functions as listed in the table below:

Table 12 Overview of GPIO[0:7] Pins

Signal Name	Pin	Primary Function	Alternative Use 1	Alternative Use 2
GPIO0	185	GPIO Pin 0	SPI1_MOSI	
GPIO1	186	GPIO Pin 1	SPI1_CS0#	
GPIO2	187	GPIO Pin 2	SPI1_MISO	
GPIO3	188	GPIO Pin 3	SPI1_SCLK	
GPIO4	189	GPIO Pin 4	I2S0_MCLK	
GPIO5	190	GPIO Pin 5	CAN1_RX	UART3_RX
GPIO6	191	GPIO Pin 6	ENET_1588_IN	
GPIO7	192	GPIO Pin 7	CAN_TX	UART3_TX

5.10 SPI

The NXP® i.MX 8M Plus processor provides Enhanced Configurable Serial Peripheral Interfaces (ECSPIs). The ECSPI interfaces offer full-duplex, synchronous serial interface with maximum operation frequency for read operations of up to 25 MHz and up to 50 MHz for write operations.

The conga-QMX8-Plus offers SPI pins for one Serial Peripheral Interface (SPI) with two device chip selects via the SPI_CS[0:1]# pins on the edge finger connector. This SPI is connected to ECSPI2 of the NXP® i.MX 8M Plus processor. The FlexSPI interface from the NXP® i.MX 8M Plus processor is connected to the 64 Mbit SPI Flash memory onboard the conga-QMX8-Plus. The NXP® i.MX 8M Plus processor is programmed to boot from the bootloader contained in the SPI flash memory.

Optionally, the conga-QMX8-Plus can offer an additional SPI via GPIO pins on the edge finger connector. This SPI is connected to ECSPI1 of the NXP® i.MX 8M Plus processor. For more information, see section 5.9 "GPIO".

5.11 CAN Bus

The conga-QMX8-Plus offers CAN0 pins for one Controller Area Network (CAN) buses via the FlexCAN1 controller integrated in the NXP® i.MX 8M Plus processor. The bus supports the CAN-FD (industrial variants), CAN (commercial variants) and CAN 2.0 B protocols. To connect the CAN controller module to the CAN bus, it is necessary to add transceiver hardware. A complete description of the CAN controller registers and functionality is beyond the scope of this user's guide. Consult NXP's i.MX 8M Plus processor reference manual for additional information about this interface.

Optionally, the conga-QMX8-Plus can offer an additional CAN bus via GPIO pins on the edge finger connector. The additional CAN bus is provided via the FlexCAN2 controller integrated in the NXP® i.MX 8M Plus processor. For more information, see section 5.9 "GPIO".

5.12 Manufacturing/JTAG Interface

The manufacturing signals defined in Qseven® Specification 2.1 are reserved for either manufacturing or debugging purposes. Optionally, the conga-QMX8-Plus offers this interface as a 10-pin JTAG interface for debugging purposes (assembly option). This interface is connected to the JTAG controller of the NXP® i.MX 8M Plus processor. The JTAG control fuses are used to allow or disallow JTAG access to secured resources. For more information, refer to section 6.3 "JTAG Interface".

5.13 Power Control

PWRBTN#

Active low input signal with 22k pull up resistor on the module, usually used to connect a push-button. A short power button event initiates the transition between SNVS and RUNTIME power states (controlled by operating system). A long power button event initiates the transition from RUNTIME to SNVS power state (controlled by hardware).

SUS_S5# (PWR_ON_REQ)

Output signal used to control (1=enable/0=disable) VCC power rail for the module and also rest power rails on carrier board. When this signal is low, input signals to the module should **NOT** be driven high—with the exception of PWRBTN# and others Qseven® suspend signals. SUS_S5# (PWR_ON_REQ) is low in the OFF and SNVS power states and high in the RUNTIME and SUSPEND power states.

SUS_S3# (PWR_STBY_REQ#)

Output signal used to control (1=enable/0=disable) power rails on the carrier board that supply runtime power to interfaces and devices. SUS_S3# (PWR_STBY_REQ#) is low in the OFF, SNVS, and SUSPEND power states and high in the RUNTIME power state.



Note

Optionally, the module can keep SUS_S3# (PWR_STBY_REQ#) high during the SUSPEND power state (software option). This option is intended for cases where VCC for the module is controlled by SUS_S3# on the carrier board.

PWGIN

Power good input signal with pull up resistors on the module, used to indicate that VCC is stable and the module can start to boot. PWGIN should be driven by an open-drain output on the carrier board. A push-pull is also acceptable. If it is not required to delay the start of the boot process, this signal can be floating. A voltage monitor for the VCC power rail is implemented on the module. The PWGIN signal must **NOT** be driven to low in the SUSPEND power state. Optionally, this signal can be disconnected on the module (assembly option).



Note

The RSTBTN# input signal can also be used to delay the start of the boot process.



Note

The conga-QMX8-Plus boots up immediately power is applied to the module's +5V input rail and PWGIN is active (if used). To shutdown the system, use the the linux command "poweroff". Depending on the operating system, the shutdown can also be performed by pressing the power button. If the system is in shutdown or standby state, pressing the power button restores the system back to full-on state. When the chip main power supply is Off, a button press asserts an output signal to request turn on the runtime power rails.

If it is desired to keep the system switched off even when the +5V input power rail is initially powered on (ATX-style), an external logic has to be used that prevents the system from booting by means of the power good signal (PWGIN). It is the responsibility of the external logic to release the PWGIN signal, when the desired event (e.g. pressing the power button) occurs.

Power Supply Implementation Guidelines

5V input power is the sole operational power source for the conga-QMX8-Plus. The remaining necessary voltages are internally generated on the module using onboard voltage regulators.



Note

The input power supply must have a monolithic ramp.

Inrush and Maximum Current Peaks on VCC_5V_SB and VCC

The inrush-current on the conga-QMX8-Plus VCC_5V_SB power rail can go up as high as 1.24 A for a maximum of 100µS. Sufficient decoupling capacitance must be implemented to ensure proper power-up sequencing.

The maximum peak-current on the conga-QMX8-Plus VCC (5V) power rail can be as high as 2.60 A. This requires that the power supply be properly dimensioned.



Note

For more information about power control signals refer to the Qseven® Specification.

5.14 Power Management

The NXP® i.MX 8M Plus SoC has an integrated Power Management Unit (PMU) that is used to control power to various SoC/module domains. The table below describes the power states supported by the conga-QMX8-Plus:

Table 13 Power States

Power State	Description
OFF	Qseven® power rails VCC_5V_SB and VCC are off. Optionally, the micropower RTC chip is powered by VCC_RTC (if it is supplied).
SNVS	Qseven® power rail VCC_5V_SB is on and VCC is off. All circuits are turned off except the power button event detection and SoC SNVS/RTC logic.
RUNTIME	Qseven® power rails VCC_5V_SB and VCC are on. SoC and module are fully running.
SUSPEND (Deep Sleep)	Qseven® power rails VCC_5V_SB and VCC are on. Cortex®-A53 power is turned off and runtime interfaces/devices on carrier can also be powered off.

5.15 Thermal Management

The NXP® i.MX 8M Plus SoC has two integrated temperature sensors. Both sensors are monitored by the Thermal Management Unit (TMU) which is also integrated in the NXP® i.MX 8M Plus SoC. The TMU offers configurable temperature thresholds for each sensor:

- Exceeding the normal temperature threshold triggers SoC frequency reduction (Default: 95°C)
- Exceeding the critical temperature threshold triggers power off (Default: 105°C)

The main sensor is located inside of the ANAMIX. The second sensor is located near the ARM core.

5.16 Watchdog

The watchdog timer (WDOG) protects against system failures by providing a method of escaping from unexpected events or programming errors. The software must periodically service the watchdog timer once the WDOG is activated. Without the servicing, the timer times out.

5.17 I2C Bus

The Inter-Integrated Circuit (I2C) bus is suitable for applications requiring occasional communications over a short distance between many devices. The I2C interfaces offered by the NXP® i.MX 8M Plus processor support up to 320 kbps, depending on pin loading and timing characteristics

The conga-QMX8-Plus offers two I2C interfaces (SoC I2C2 and I2C3) on the Qseven® edge connector. The I2C2 is connected to the SMBus pins. The I2C3 is connected to the dedicated Qseven® I2C pins. For more information, refer to the pinout in section 7 "Signal Descriptions and Pinout Tables".

5.18 Boot Select

The onboard SPI flash device is configured as the default boot device via SoC eFuses on conga-QMX8-Plus revisions A.0 and later.



Note

Earlier revisions offer a DIP switch (SW1) onboard the module to select the boot device:

Table 14 Boot Select (Prototype Revisions)

SW1				Selected Boot Source
#4	#3	#2	#1	
OFF	OFF	OFF	OFF	Boot from fuse
OFF	OFF	OFF	ON	Serial download
OFF	OFF	ON	OFF	SDHC3 (eMMC)
OFF	OFF	ON	ON	SDHC2 (uSD onmodule)
OFF	ON	ON	OFF	QSPI (onmodule)


The OS boot device is defined via the U-Boot environment variables. For more information, refer to the conga-QMX8-Plus software documentation linked to in section 8 "Software Documentation".

Optionally, the SoC eFuses can be configured to use a different boot device. The options are onboard eMMC or onboard microSD card socket.

5.18.1 Serial Downloader Mode

Low on the BIOS_DISABLE# / BOOT_ALT# pin enables the Serial Downloader mode. The program image can be downloaded over the USB_P1 port (see section 5.5 "USB"). The conga-QMX8-Plus prototype revisions offer a DIP switch to select the Serial Downloader mode (see section 5.18 "Boot Select").

6 Onboard Interfaces and Devices

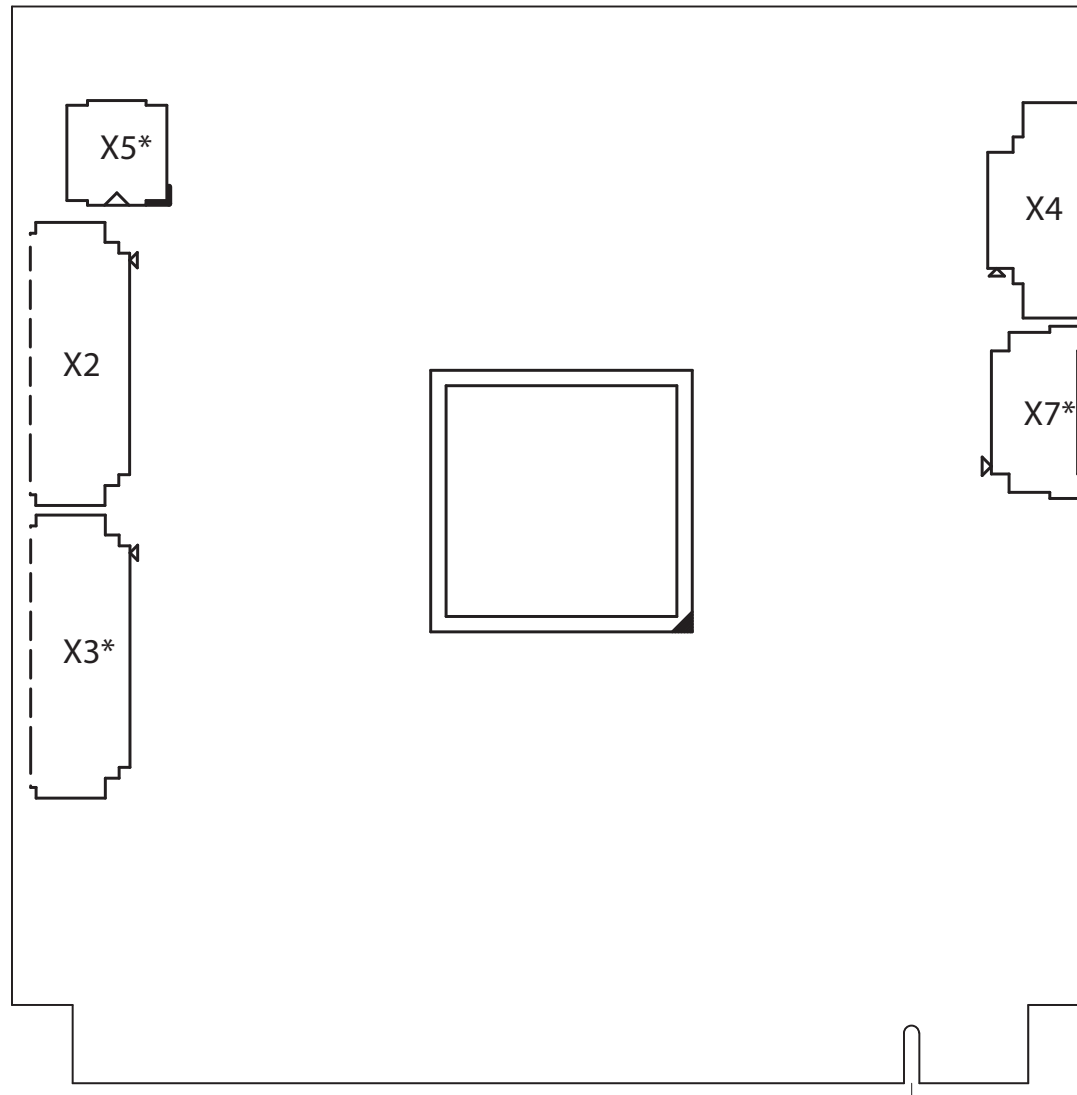

* Assembly Option

6.1 RS-232 Debug Ports

The conga-QMX8-Plus offers connector X4 for two RS-232 debug ports. The ports are connected to the NXP® i.MX 8M Plus UART2 and UART4 pins via a MAX3232 transceiver by default. The transceiver converts the UART CMOS level (3.3V) to RS-232 voltage levels and is guaranteed to run at data rates of 250 kbps in the normal operating mode, while maintaining RS-232 output levels.

Table 15 RS-232 Debug Ports (X4) Signal Descriptions

Pin	SoC Ball	Description
1	UART4_TXD	Cortex®-M7 Debug: Transmit signal via MAX3232 RS-232 Transmitter/Receiver connected to UART4_TXD of the SoC
2	+VIN	Qseven VCC (+5 V)
3	GND	Ground
4	UART2_TXD	Cortex®-A53 Console: Transmit signal via MAX3232 RS-232 Transmitter/Receiver connected to UART2_TXD of the SoC
5	UART2_RXD	Cortex®-A53 Console: Receive signal via MAX3232 RS-232 Transmitter/Receiver connected to UART2_RXD of the SoC
6	UART4_RXD	Cortex®-M7 Debug: Receive signal via MAX3232 RS-232 Transmitter/Receiver connected to UART4_RXD of the SoC



Connector Type

X4: Molex PicoBlade 0532610671 (6 Circuits, 1.25mm Pitch, Right-Angle, Friction Lock)
Mates with Molex PicoBlade Cable Assembly Series 15134 with 6 Circuits



Note

The RS-232 adapter cable for this connector can be ordered from congatec (PN: 48000023 in section 1.4 "Accessories").

6.2 MIPI CSI-2® Camera Connectors

The conga-QMX8-Plus offers one onboard flat foil connector (X2) by default for Basler's proprietary BCON for MIPI interface with four lanes each and up to 1.5 Gbps per lane. X2 is connected to the SoC MIPI-CSI1 interface.

Optionally, conga-QMX8-Plus can offer a second onboard flat foil connector (X3) connected to the SoC MIPI-CSI2 interface (assembly option).

For matching camera accessories, refer to the table in section 1.4 "Accessories".



Note

The pinout of the connectors (X2, X3) is not compatible with the optional MIPI-CSI2 feature interface described in the Qseven® Specification. For information about Basler's proprietary BCON for MIPI interface, refer to Basler's product documentation at:

<https://docs.baslerweb.com/embedded-vision/basler-dart-bcon-for-mipi>

6.3 JTAG Interface

Optionally, the conga-QMX8-Plus can offer an onboard JTAG debug interface (X5) compatible with Nit6X_JTAG adapter Boundary Devices (assembly option).

Table 16 JTAG Debug Interface (X5) Signal Descriptions

Pin	SoC Ball	Description
1	JTAG_VREF	+3.3V sourced by Module
2	JTAG_TMS	JTAG mode select
3	GND	Ground
4	JTAG_TCK	JTAG clock
5	GND	Ground
6	JTAG_TDO	JTAG data out
7	JTAG_MOD	Should not be used
8	JTAG_TDI	JTAG data in
9	GND	Ground
10	JTAG_SRST#	System Reset, active low



Connector Type

X5: Pin Header 2x5pin, 1.27mm Pitch

6.4 SPI Flash

Onboard the conga-QMX8-Plus is a 64 Mbit SPI flash memory by default. Optionally, the conga-QMX8-Plus can be offered with up to 256 Mbit SPI flash memory (assembly option). This flash memory contains the bootloader and is directly connected to the QSPIA interface of the NXP® i.MX 8M Plus processor.

The NXP® i.MX 8M Plus processor is programmed to boot from the SPI flash by default.

6.5 Android Buttons

Optionally, the conga-QMX8-Plus can offer an onboard eight pin connector (X7) for implementing Android buttons (assembly option). The signals are directly connected to the NXP® i.MX 8M Plus processor. The signals can be only be driven by ground or left open.

Table 17 Android Buttons (X7) Signal Descriptions

Signal	Pin #	Description
PWRBTN#	1	Power button signal
KEY_VOL_UP	2	Increases volume
HOME	3	Returns to the main home screen
SEARCH	4	Brings up the search function
BACK	5	Takes you a level back in an app or a page back in a browser
MENU	6	Displays additional options in an application
KEY_VOL_DN	7	Decreases volume
GND	8	Ground

6.6 LPDDR4 Memory

The conga-QMX8-Plus offers up to 8 GB 32 bit LPDDR4 onboard SDRAM @ 2000 MHz with support for In-band ECC. The default memory size of each conga-QMX8-Plus variant is listed in section 1.3 "Options Information".

6.7 eMMC

The conga-QMX8-Plus offers an onboard eMMC 5.1 HS400 storage device with up to 128 GB (16 GB assembled by default). Changes to the onboard eMMC may occur during the lifespan of the module in order to keep up with the rapidly changing eMMC technology. The performance of the newer eMMC may vary depending on the eMMC technology.



Note

For adequate operation of the eMMC, ensure that at least 15 % of the eMMC storage is reserved for vendor-specific functions.

6.8 Micro SD

The conga-QMX8-Plus offers an onboard micro SD card socket (backside of the module). It is connected to SDHC2 of the NXP® i.MX 8M Plus processor. Four lanes are used for data. The micro SD card socket supports:

- OS boot
- U-Boot (Optional)
- SD/SDIO specification 3.0
- 200 MHz 1.8V signaling for up to 100 MBps
- Secure Digital eXtended Capacity (SDXC™) cards
- UHS-I (SDR104/50 and DDR50)
- Default Mode and High Speed Mode

6.9 RTC

The conga-QMX8-Plus offers a discrete Real-Time Clock (RTC) via an onboard MicroCrystal RV-4162-C7 module (I²C Address: 0xD0) with a time accuracy of ±20 ppm @ 25°C. This RTC module is powered via the Qseven® VCC_RTC rail or a 3.3V rail.



The conga-QMX8-Plus has onboard Schottky diodes that prevent reverse current.

7 Signal Descriptions and Pinout Tables

Click on the screenshot below to directly download the conga-QMX8-Plus pinout as an Excel file:

QX8P Qseven edge connection								
QX8P / conga-QMX8-Plus Interface	i.MX8MP Ball Name	i.MX8MP Ball	Qseven Pin Name	Qseven Pin	I/O	PU/PD	Remark	alt. Function
GND			GND	1				
GND			GND	2				
Gigabit Ethernet			GBE_MDI3-	3	I/O-DIFF		Ethernet controller (AR8031), i.MX8MP:ENET_QOS	
Gigabit Ethernet			GBE_MDI2-	4	I/O-DIFF		Ethernet controller (AR8031), i.MX8MP:ENET_QOS	
Gigabit Ethernet			GBE_MDI3+	5	I/O-DIFF		Ethernet controller (AR8031), i.MX8MP:ENET_QOS	
Gigabit Ethernet			GBE_MDI2+	6	I/O-DIFF		Ethernet controller (AR8031), i.MX8MP:ENET_QOS	
Gigabit Ethernet			GBE_LINK100#	7	O		Ethernet controller (AR8031), i.MX8MP:ENET_QOS	
Gigabit Ethernet			GBE_LINK1000#	8	O		Ethernet controller (AR8031), i.MX8MP:ENET_QOS	
Gigabit Ethernet			GBE_MDI1-	9	I/O-DIFF		Ethernet controller (AR8031), i.MX8MP:ENET_QOS	
Gigabit Ethernet			GBE_MDI0-	10	I/O-DIFF		Ethernet controller (AR8031), i.MX8MP:ENET_QOS	
Gigabit Ethernet			GBE_MDI1+	11	I/O-DIFF		Ethernet controller (AR8031), i.MX8MP:ENET_QOS	
Gigabit Ethernet			GBE_MDI0+	12	I/O-DIFF		Ethernet controller (AR8031), i.MX8MP:ENET_QOS	
Gigabit Ethernet			GBE_LINK#	13	O		Ethernet controller (AR8031), i.MX8MP:ENET_QOS, only LINK1000 and LINK100	
Gigabit Ethernet			GBE_ACT#	14	O		Ethernet controller (AR8031), i.MX8MP:ENET_QOS, LINK#/ACT	

Alternatively, you can find the conga-QMX8-Plus pinout by selecting it from the drop-down list at:

https://git.congatec.com/arm-nxp/imx8-family/doc/cgtimx8_pinlist/tree/master

The Qseven® signals are described in the Qseven® Specification 2.1 publicly available at:


<https://sget.org>

The NXP® i.MX 8M Plus Applications Processor Datasheet for Commercial and Industrial Products is available at:

<https://www.nxp.com>

8 Software Documentation

Click on the screenshot below to open the conga-QMX8-Plus software documentation in your browser:

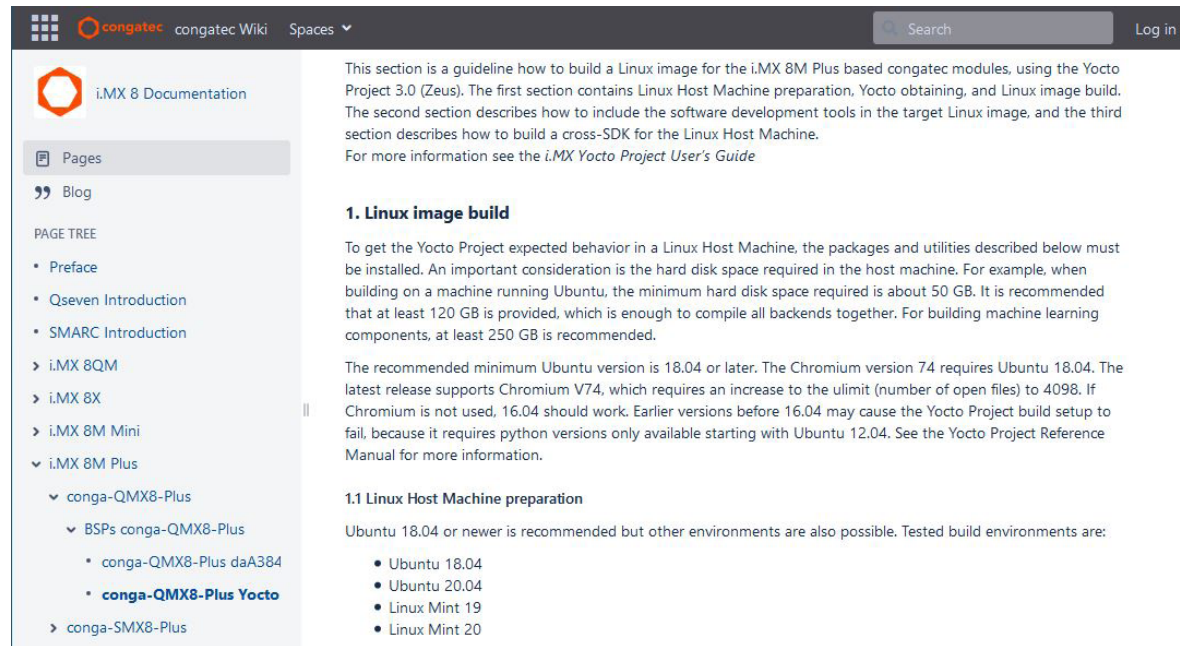

Alternatively, you can find the conga-QMX8-Plus software documentation by selecting it from the navigation menu at:

<https://wiki.congatec.com>