

conga-PA7

Pico-ITX SBC with Intel® Atom® x6000E/RE, Intel® Pentium® and Celeron® J Series Processors

User's Guide

Revision 1.07

Revision History

Revision	Date (yyyy-mm-dd)	Author	Changes
0.1	2021-04-15	BEU	<ul style="list-style-type: none">• Preliminary release
0.2	2021-07-02	BEU	<ul style="list-style-type: none">• Added Software License Information• Updated section 6.6 "congatec Battery Management Interface"
1.00	2021-12-18	BEU	<ul style="list-style-type: none">• Updated processor from J6425 to J6426 for PN 048920 in Table 1 "conga-PA7 Commercial Variants"• Removed Table 5 "Power Supplies" and removed reference to this table from note in section 5.1.1 "DC Power Jack"• Updated Table 5 "Feature Summary"• Added note to section 2.2 "Supported Operating Systems" and updated section 6.5.4 "OEM BIOS Code/Data" because CSM is no longer supported• Removed support for Windows IoT 10 Core from section 2.1 "Feature List" and 2.2 "Supported Operating Systems"• Added values to Table 7 "Power Consumption Values" and Table 8 "CMOS Battery Power Consumption"• Updated block diagram in section 3 "Block Diagram"• Updated all drawings in section 4 "Cooling Solutions"• Changed picture of connector X8 in section 5.5.3 "USB 2.0 Header"• Added note about supported OS for the CAN ports in section 5.9 "CAN Ports"• Removed specific naming of microcontroller in section 6.4 "congatec Board Controller (cBC)"• Removed SMBus from section 6.6 "congatec Battery Management Interface"
1.01	2023-08-16	BEU	<ul style="list-style-type: none">• Updated title page• Updated RoHS Directive in preface section• Updated terminology in preface section• Added CPU use conditions, Tjunction, and DTR information to Table 2 and 3• Added note about a Windows 10 issue with S3 to section 2.2 "Supported Operating Systems"• Updated section 6.4.2 "Power Loss Control"• Added section 6.4.4 "Enhanced Soft-Off State"
1.02	2023-12-13	BEU	<ul style="list-style-type: none">• Added note to section 2.7 "Environmental Specifications"• Added caution and note to section 4 "Cooling Solutions"
1.03	2024-01-04	BEU	<ul style="list-style-type: none">• Updated audio codec in sections 2.1 "Feature List" and 5.4 "Audio Header"
1.04	2024-11-04	BEU	<ul style="list-style-type: none">• Corrected memory speed of PN 048921 in Table 1 "conga-PA7 Commercial Variants"
1.05	2024-11-07	BEU	<ul style="list-style-type: none">• Updated temperature range and relative humidity in section 2.1 "Feature List" and 2.7 "Environmental Specifications"
1.06	2024-11-11	BEU	<ul style="list-style-type: none">• Added instruction to read additional documents to preface section• Added note to disable turbo mode for industrial use conditions in section 1.2 "Options Information"• Updated section 2.1 "Feature List"• Updated section 2.2 "Supported Operating Systems"• Added section 6.1 "Integrated Real-Time Hypervisor"
1.07	2025-03-06	RVI	<ul style="list-style-type: none">• Added a WEEE Compliance Declaration to the preface section• Added a note to section 2.3 "Mechanical Dimensions"• Added new section 2.8 Storage Specifications• Updated TPM to Infineon SLB9672 in section 6.11 "Security Features"

Preface

This user's guide provides information about the components, features and connectors available on the conga-PA7 Pico-ITX SBC. Additionally, check the restricted area of the congatec website at www.congatec.com and the website of the respective silicon vendor for relevant documents (e.g., Erratum, PCN, Sighting Reports, etc.).

Software Licenses

Notice Regarding Open Source Software

The congatec products contain Open Source software that has been released by programmers under specific licensing requirements such as the "General Public License" (GPL) Version 2 or 3, the "Lesser General Public License" (LGPL), the "ApacheLicense" or similar licenses.

You can find the specific details at <https://www.congatec.com/en/licenses/>. Search for the revision of the BIOS/UEFI or Board Controller Software (as shown in the POST screen or BIOS setup) to get the complete product related license information. To the extent that any accompanying material such as instruction manuals, handbooks etc. contain copyright notices, conditions of use or licensing requirements that contradict any applicable Open Source license, these conditions are inapplicable.

The use and distribution of any Open Source software contained in the product is exclusively governed by the respective Open Source license. The Open Source software is provided by its programmers without ANY WARRANTY, whether implied or expressed, of any fitness for a particular purpose, and the programmers DECLINE ALL LIABILITY for damages, direct or indirect, that result from the use of this software.

OEM/ CGUTL BIOS

BIOS/UEFI modified by customer via the congatec System Utility (CGUTL) is subject to the same license as the BIOS/UEFI it is based on. You can find the specific details at <https://www.congatec.com/en/licenses/>.

Disclaimer

The information contained within this user's guide, including but not limited to any product specification, is subject to change without notice.

congatec GmbH provides no warranty with regard to this user's guide or any other information contained herein and hereby expressly disclaims any implied warranties of merchantability or fitness for any particular purpose with regard to any of the foregoing. congatec GmbH assumes no liability for any damages incurred directly or indirectly from any technical or typographical errors or omissions contained herein or for discrepancies between the product and the user's guide. In no event shall congatec GmbH be liable for any incidental, consequential, special, or exemplary damages, whether based on tort, contract or otherwise, arising out of or in connection with this user's guide or any other information contained herein or the use thereof.

Intended Audience

This user's guide is intended for technically qualified personnel. It is not intended for general audiences.

RoHS Directive

All congatec GmbH designs comply with EU RoHS Directive 2011/65/EU and Delegated Directive 2015/863.

Electrostatic Sensitive Device



All congatec GmbH products are electrostatic sensitive devices. They are enclosed in static shielding bags, and shipped enclosed in secondary packaging (protective packaging). The secondary packaging does not provide electrostatic protection.

Do not remove the device from the static shielding bag or handle it, except at an electrostatic-free workstation. Also, do not ship or store electronic devices near strong electrostatic, electromagnetic, magnetic, or radioactive fields unless the device is contained within its original packaging. Be aware that failure to comply with these guidelines will void the congatec GmbH Limited Warranty.

Symbols

The following symbols are used in this user's guide:



Warning

Warnings indicate conditions that, if not observed, can cause personal injury.



Caution

Cautions warn the user about how to prevent damage to hardware or loss of data.



Note

Notes call attention to important information that should be observed.



Connector Type

Describes the connector used on the Single Board Computer and a possible mating connector.

WEEE Directive



To comply with Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), ensure that this product is disposed of correctly at the end of its lifecycle. Customers are required to take electrical and electronic equipment to designated collection facilities separate from unsorted municipal waste, following applicable regional laws.

Proper disposal through designated collection points allows for the recycling, recovery, and reuse of valuable materials, supporting a more efficient use of resources and reducing environmental impact.



Note
Standalone congatec components, such as modules, carrier boards, and cooling solutions are designed to function only within other products. WEEE registration for the complete product must be completed by the entity placing the final product on the market.

Copyright Notice

Copyright © 2021, congatec GmbH. All rights reserved. All text, pictures and graphics are protected by copyrights. No copying is permitted without written permission from congatec GmbH.

congatec GmbH has made every attempt to ensure that the information in this document is accurate yet the information contained within is supplied "as-is".

Trademarks

Product names, logos, brands, and other trademarks featured or referred to within this user's guide, or the congatec website, are the property of their respective trademark holders. These trademark holders are not affiliated with congatec GmbH, our products, or our website.

Warranty

congatec GmbH makes no representation, warranty or guaranty, express or implied regarding the products except its standard form of limited warranty ("Limited Warranty") per the terms and conditions of the congatec entity, which the product is delivered from. These terms and conditions can be downloaded from www.congatec.com. congatec GmbH may in its sole discretion modify its Limited Warranty at any time and from time to time.

The products may include software. Use of the software is subject to the terms and conditions set out in the respective owner's license agreements, which are available at www.congatec.com and/or upon request.

Beginning on the date of shipment to its direct customer and continuing for the published warranty period, congatec GmbH represents that

the products are new and warrants that each product failing to function properly under normal use, due to a defect in materials or workmanship or due to non conformance to the agreed upon specifications, will be repaired or exchanged, at congatec's option and expense.

Customer will obtain a Return Material Authorization ("RMA") number from congatec GmbH prior to returning the non conforming product freight prepaid. congatec GmbH will pay for transporting the repaired or exchanged product to the customer.

Repaired, replaced or exchanged product will be warranted for the repair warranty period in effect as of the date the repaired, exchanged or replaced product is shipped by congatec, or the remainder of the original warranty, whichever is longer. This Limited Warranty extends to congatec's direct customer only and is not assignable or transferable.

Except as set forth in writing in the Limited Warranty, congatec makes no performance representations, warranties, or guarantees, either express or implied, oral or written, with respect to the products, including without limitation any implied warranty (a) of merchantability, (b) of fitness for a particular purpose, or (c) arising from course of performance, course of dealing, or usage of trade.

congatec GmbH shall in no event be liable to the end user for collateral or consequential damages of any kind. congatec shall not otherwise be liable for loss, damage or expense directly or indirectly arising from the use of the product or from any other cause. The sole and exclusive remedy against congatec, whether a claim sound in contract, warranty, tort or any other legal theory, shall be repair or replacement of the product only.

Certification

congatec GmbH is certified to DIN EN ISO 9001 standard.



Technical Support

congatec GmbH technicians and engineers are committed to providing the best possible technical support for our customers so that our products can be easily used and implemented. We request that you first visit our website at www.congatec.com for the latest documentation, utilities and drivers, which have been made available to assist you. If you still require assistance after visiting our website then contact our technical support department by email at support@congatec.com

Terminology

Term	Description
cBC	congatec Board Controller
DDC	Display Data Channel is an I ² C bus interface between a display and a graphics adapter.
DTR	Dynamic Temperature Range
GbE	Gigabit Ethernet
HDA	High Definition Audio
I ² C Bus	Inter-Integrated Circuit Bus
LPC	Low Pin-Count
LVDS	Low-Voltage Differential Signaling
N.A	Not available
N.C	Not connected
PCIe	Peripheral Component Interface Express
S/PDIF	Sony/Philips Digital Interconnect Format
SATA	Serial AT Attachment: serial-interface standard for hard disks
SBC	Single Board Computer
SDIO	Secure Digital Input Output
SPI	Serial Peripheral Interface
TBD	To be determined
TMDS	Transition Minimized Differential Signaling
USB	Universal Serial Bus

Contents

1	Introduction	11	5.5.3	USB 2.0 Header	31
1.1	Pico-ITX Concept	11	5.6	Ethernet Ports	31
1.2	conga-PA7	11	5.7	Display Interfaces	32
1.2.1	Options Information	12	5.7.1	DP++ Port	32
1.2.2	Optional Accessories	14	5.7.2	USB Type-C® Port	32
2	Specification	15	5.7.3	LVDS Header	33
2.1	Feature List	15	5.7.3.1	Backlight Power Header	34
2.2	Supported Operating Systems	16	5.7.3.2	Panel Power Jumper	34
2.3	Mechanical Dimensions	16	5.8	COM Ports	35
2.4	Power Supply Voltage	17	5.9	CAN Ports	36
2.5	Power Consumption	17	5.10	M.2 Key-B	37
2.6	Supply Voltage Battery Power	18	5.11	M.2 Key-E	38
2.7	Environmental Specifications	19	5.12	CPU Fan Header	40
2.8	Storage Specifications	19	5.13	BIOS Flash Header	40
2.8.1	Module	19	6	Additional Features	41
2.8.2	Cooling Solution	20	6.1	Integrated Real-Time Hypervisor	41
3	Block Diagram	21	6.2	Feature Connectors	42
4	Cooling Solutions	22	6.2.1	Buttons and LEDs	42
4.1	CSP Dimensions	23	6.2.2	I2C and Watchdog	43
4.2	HSP Dimensions	25	6.2.3	GPIOs and Real-Time Trigger Signals	44
5	Connector Description	27	6.3	DRAM	44
5.1	Power Supply Connectors	27	6.4	Flash Storage	44
5.1.1	DC Power Jack	27	6.5	congatec Board Controller (cBC)	45
5.1.2	2-Pin Power Connector	27	6.5.1	Fan Control	45
5.1.3	USB Type-C® Port	28	6.5.2	Power Loss Control	45
5.2	Cell Battery Header	28	6.5.3	Board Information	45
5.3	System State LED	29	6.5.4	Enhanced Soft-Off State	45
5.4	Audio Header	29	6.6	OEM BIOS Customization	46
5.5	USB Interfaces	30	6.6.1	OEM Default Settings	46
5.5.1	USB Type-A Ports	30	6.6.2	OEM Boot Logo	46
5.5.2	USB Type-C® Port	30	6.6.3	OEM POST Logo	46
			6.6.4	OEM BIOS Code/Data	46
			6.6.5	OEM DXE Driver	46
			6.7	congatec Battery Management Interface	47

6.8	API Support (CGOS)	47
6.9	Thermal/Voltage Monitoring.....	47
6.10	External System Wake Event	47
6.11	Security Features.....	47
7	Mechanical Drawing	48
8	BIOS Setup Description	49
8.1	Navigating the BIOS Setup Menu	49
8.2	BIOS Versions.....	49
8.3	Updating the BIOS.....	50
8.4	Supported Flash Device.....	50

List of Tables

Table 1	conga-PA7 Commercial Variants.....	12
Table 2	conga-PA7 Industrial Variants	13
Table 3	Cooling Solutions.....	14
Table 4	Cables	14
Table 5	Feature Summary	15
Table 6	Measurement Description.....	17
Table 7	Power Consumption Values	18
Table 8	CMOS Battery Power Consumption	18
Table 9	X21 Pinout	27
Table 10	X22 Pinout	27
Table 11	X23 Pinout	28
Table 12	D20 Description	29
Table 13	X6 Pinout	29
Table 14	X8 Pinout	31
Table 15	X12, X13 Description	31
Table 16	X3 Pinout	33
Table 17	X4 Pinout	34
Table 18	X24 Settings.....	34
Table 19	X15, X16 Pinout	35
Table 20	X1, X2 Pinout	36
Table 21	X10 Pinout	37
Table 22	X11 Pinout	38
Table 23	X17 Pinout	40
Table 24	X14 Pinout	40
Table 25	X18 Pinout	42
Table 26	X19 Pinout	43
Table 27	X20 Pinout	44

1 Introduction

1.1 Pico-ITX Concept

The Pico-ITX form factor provides system designers and manufacturers with a standardized ultra compact platform for development. With a footprint of 100 mm x 72 mm, this scalable platform promotes the design of highly integrated, energy efficient systems. Due to its small size, the Pico-ITX form factor enables PC appliance designers not only to design attractive low cost devices but also allows them to explore a huge variety of product development options - from compact space-saving designs to fully functional Information Station and Value PC systems. This helps to reduce product design cycle and encourages rapid innovation in system design to meet the ever-changing needs of the market.

Additionally, the boards can be passively cooled, presenting opportunities for fanless designs. The Pico-ITX boards are equipped with various interfaces such as PCI Express, USB, Ethernet, Displays and Audio.

1.2 conga-PA7

The conga-PA7 is a Single Board Computer (SBC) design based on the Pico-ITX specification. The conga-PA7 SBC features the Intel® Atom® x6000E/RE Series and Intel® Pentium® and Celeron® J Series processors (formerly Elkhart Lake). With maximum 12 W TDP processors, the SBC offers Ultra Low Power boards with high computing performance and outstanding graphics. Additionally, the SBC offers onboard LPDDR4x memory, eMMC storage, multiple I/O interfaces, up to three independent display interfaces, and various congatec embedded features.

With small board size and low height keep-out zones, the conga-PA7 provides manufacturers and system designers with the opportunity to design compact systems for space restricted areas.

The various features and capabilities offered by the conga-PA7 makes it ideal for the design of compact, energy efficient, performance-oriented embedded systems.

1.2.1 Options Information

The conga-PA7 is currently available in eight variants. This user's guide describes all of these variants. The tables below show the different configurations available. Check for the PN that applies to your product. This will tell you what options described in this user's guide are available on your particular module.

Table 1 conga-PA7 Commercial Variants

PN		048900	048901	048902	048920	048921
Intel® Processor		Atom® x6425E Quad Core 2.0 GHz	Atom® x6413E Quad Core 1.5 GHz	Atom® x6211E Dual Core 1.3 GHz	Pentium® J6426 Quad Core 2.0 GHz	Celeron® J6413 Quad Core 1.8 GHz
Burst Frequency		2.7 GHz	2.7 GHz	3.0 GHz	2.7 GHz *	2.7 GHz
Onboard Memory		8 GB 3733 MT/s	4 GB 3200 MT/s	4 GB 3200 MT/s	8 GB 3733 MT/s	4 GB 3200 MT/s
eMMC		64 GB	32 GB	32 GB	64 GB	32 GB
Processor Graphics		Intel® UHD Graphics	Intel® UHD Graphics	Intel® UHD Graphics	Intel® UHD Graphics	Intel® UHD Graphics
Execution Units		32	16	16	32	16
Graphics Base / Burst		500 MHz / 750 MHz	500 MHz / 750 MHz	350 MHz / 750 MHz	400 MHz / 850 MHz	400 MHz / 800 MHz
Processor TDP (Max)		12 W	9 W	6 W	10 W	10 W
CPU Use Condition ^{1,2}		Embedded	Embedded	Embedded	PC Client	PC Client
CPU Tjunction	Min.	-40°C	-40°C	-40°C	0°C	0°C
	Max.	105°C	105°C	105°C	105°C	105°C
DTR (Cold to Hot Transition) ³		T _{Boot} + 90°C	T _{Boot} + 90°C	T _{Boot} + 90°C	T _{Boot} + 70°C	T _{Boot} + 70°C
DTR (Hot to Cold Transition) ³		T _{Boot} - 90°C	T _{Boot} - 90°C	T _{Boot} - 90°C	T _{Boot} - 70°C	T _{Boot} - 70°C

* Up to 3.0 GHz if only one or two cores are active.

Table 2 conga-PA7 Industrial Variants

PN		048910	048911	048912
Intel® Processor		Atom® x6425RE Quad Core 1.9 GHz	Atom® x6414RE Quad Core 1.5 GHz	Atom® x6212RE Dual Core 1.2 GHz
Burst Frequency		N/A	N/A	N/A
Onboard Memory		8 GB 4267 MT/s	4 GB 3200 MT/s	4 GB 3200 MT/s
eMMC		64 GB	32 GB	32 GB
Processor Graphics		Intel® UHD Graphics	Intel® UHD Graphics	Intel® UHD Graphics
Execution Units		32	16	16
Graphics Base / Burst		400 MHz / N/A	400 MHz / N/A	350 MHz / N/A
Processor TDP (Max)		12 W	9 W	6 W
CPU Use Condition ^{1,2}		Industrial	Industrial	Industrial
CPU Tjunction	Min.	-40°C	-40°C	-40°C
	Max.	110°C	110°C	110°C
DTR (Cold to Hot Transition) ^{3,4}		T _{Boot} + 90°C	T _{Boot} + 90°C	T _{Boot} + 90°C
		T _{Boot} + 110°C	T _{Boot} + 110°C	T _{Boot} + 110°C
DTR (Hot to Cold Transition) ^{3,4}		T _{Boot} - 90°C	T _{Boot} - 90°C	T _{Boot} - 90°C
		T _{Boot} - 110°C	T _{Boot} - 110°C	T _{Boot} - 110°C



- Note**
- ^{1.} Intel SoC use conditions. For more information, see Intel documentation.
 - ^{2.} Disable Turbo mode for industrial use conditions.
 - ^{3.} T_{Boot} is the boot temperature. If the Tjunction is not within the DTR range, you must reboot the system. See Intel documentation for more information.
 - ^{4.} For DTR of ±110°C, the speed of any enabled USB 3.1 port must be limited to 5 Gb/s.

1.2.2 Optional Accessories

Table 3 Cooling Solutions

Article	PN	Description
conga-PA7/HSP-T	048950	Heatspreader solution for conga-PA7 based on open silicon Intel Pentium and Celeron J and N processors. All standoffs are M2.5 thread.
conga-PA7/i-HSP-T	048951	Heatspreader solution for conga-PA7 based on lidded silicon Intel Atom x6000E processors. All standoffs are M2.5 thread.
conga-PA7/CSP-T	048952	Passive cooling solution for conga-PA7 based on open silicon Pentium and Celeron J and N processors. All standoffs are M2.5 thread.
conga-PA7/i-CSP-T	048953	Passive cooling solution for conga-PA7 based on lidded silicon Atom X6000E processors. All standoffs are M2.5 thread.
conga-PA7/HSP-B	048954	Heatspreader solution for conga-PA7 based on open silicon Intel Pentium and Celeron J and N processors. All standoffs are with 2.7mm borehole.
conga-PA7/i-HSP-B	048955	Heatspreader solution for conga-PA7 based on lidded silicon Intel Atom x6000E processors. All standoffs are with 2.7mm borehole.

Table 4 Cables

Article	PN	Description	Fits to Connector
cab-Pico-ITX-Audio Cable Adapter	14000146	Audio cable adapter, 15cm	X6
cab-Pico-ITX-Buttons-LED	14000147	Buttons and LEDs adapter, 15cm	X18
cab-Pico-ITX-Buttons-LED, 100cm	14000148	Buttons and LEDs adapter, 100cm	X18
cab-Pico-ITX-GPIO	14000151	GPIO cable, 15cm, wires with open ends	X20
cab-Pico-ITX-RS232	14000152	RS232 cable adapter, 15cm (Molex Picoblade to DSUB 9)	X15, X16
cab-Pico-ITX-RS422	14000153	RS422 cable adapter, embedded termination, 15cm (Molex Picoblade to DSUB 9)	X15, X16
cab-Pico-ITX-RS485	14000154	RS485 cable adapter, embedded termination, 15cm (Molex Picoblade to DSUB 9)	X15, X16
cab-Pico-ITX-External-Power	14000157	Power cable with DC jack and 4mm banana plugs, 100cm	X21
cab-Pico-ITX-Feature	14000161	Feature cable, 15cm, wires with open ends	X19
cab-Pico-ITX-Power	14000172	Power cable adapter from DC jack to Molex MicroFit (int. power connector)	X22
cab-Pico-ITX-Backlight	14000206	LCD backlight cable for AUO G170EG01 V1	X4
cab-Pico-ITX-USB20-Twin	14000210	USB 2.0 cable adapter, 2mm pin header, 20 / 25 cm	X8
cab-Pico-ITX-LVDS	14000211	LCD data cable for AUO G170EG01 V1 (LVDS)	X3

2 Specification

2.1 Feature List

Table 5 Feature Summary

Form Factor	Pico-ITX Single Board Computer		
CPU	Intel® Atom® x6000E/RE Series and Intel® Pentium® and Celeron® J Series processors (formerly Elkhart Lake)		
DRAM	Up to 4 Channels onboard LPDDR4x with up to 4,267 MT/s; max. system capacity 16 GB		
Chipset	Integrated in SoC		
Ethernet	2x LAN Gbit / 100 Mbit / 10 Mbit with TSN support; 2x real-time trigger		
Mass Storage	eMMC 5.1 onboard flash up to 64 GB (optional up to 128 GB)		
Sound	Intel® High Definition Audio		
Graphics	High performance Intel® UHD Graphics for 10th Gen Intel® Processor		
Internal Connectors	2x USB 2.0 1x LVDS 18/24bit 1x Backlight power connector (5V, 12V) 1x Audio Connector (HP/Line Out, MIC In, S/PDIF Out) 1x Power In (+12V) 2x COM (RS232/422/485)	1x Fan Connector with PWM 3x Feature Connectors 1x M.2 key ID B type 2280 (2 PCIe lanes/SATA, USB 2.0) or type 2242 (opt.) 1x M.2 key ID E type 2230 (1 PCIe lane, USB 2.0) 2x CAN (opt.) 1x 2-pin Header for RTC Power Backup	
External Connectors	1x Displayport DP++ 2x LAN RJ45 1x USB Type C (with Power Delivery and DP)	2x USB Type A 1x DC-In	
congatec Board controller	Multistage watchdog; non-volatile user data storage; manufacturing and board Information; board statistics; fast mode and multi-master I ² C bus; power loss control		
Embedded BIOS Feature	AMI Aptio® UEFI firmware; 32 Mbyte serial SPI with congatec Embedded BIOS features; OEM Logo; OEM CMOS Defaults; LCD Control; Display Auto Detection; Backlight Control; Flash Update		
Security	TPM 2.0		
Power Management	ACPI 5 .0 compliant; Smart Battery Management		
Operating Systems	Microsoft® Windows 11; Microsoft® Windows 11 IoT Enterprise; Microsoft® Windows 10; Microsoft® Windows 10 IoT Enterprise; Linux; Yocto		
Hypervisor	RTS Real-Time Hypervisor		
Temperature	Commercial variants: Operation: 0 to +60°C Storage: -20 to +80°C Industrial variants: Operation: -40 to +85°C Storage: -40 to +85°C		
Relative Humidity	Operating: 10 to 85% r. H. non cond. Storage: 5 to 85% r. H. non cond.		
Size	100 x 72 mm		

2.2 Supported Operating Systems

The conga-PA7 supports the following operating systems:

- Microsoft® Windows® 11, 64-bit (version 22H2 and later)
- Microsoft® Windows® 11 IoT Enterprise, 64-bit (version 22H2 and later)
- Microsoft® Windows® 10, 64-bit (version 22H2 and later)
- Microsoft® Windows® 10 IoT Enterprise, 64-bit (version 22H2 and later)
- Linux Ubuntu (64-bit)
- Yocto (64-bit)
- RTS Hypervisor



Note

1. The conga-PA7 only supports native UEFI operating systems. Legacy operating systems that require the Compatibility Support Module (CSM) as part of the UEFI firmware are not supported.
2. Windows® 10 version 21H2 (OS build 19044) may sporadically fail to wake from S3 sleep state (POST Code: 0300). congatec recommends updating to a later Windows® 10 version.

2.3 Mechanical Dimensions

- 100 mm x 72 mm
- Top side max. 18.3 mm
- Bottom (CPU) side max. 3.4 mm



Note

The 3D models of congatec products are available at www.congatec.com/login. These models indicate the overall length, height and width of each product. If you need login access, contact your local sales representative.

2.4 Power Supply Voltage

- 12 V DC \pm 10%



Caution

The maximum operating input voltage is 13.5 volts. Do not exceed this rating for a prolonged time. Otherwise, the system may be damaged or may have reliability issues.

2.5 Power Consumption

The power consumption values were measured with the following setup:

- conga-PA7
- conga-PA7 cooling solution
- Microsoft® Windows® 10



Note

The CPU was stressed to its maximum workload with the Intel® Power Thermal Utility (PTU).

The power consumption values were recorded during the following system states:

Table 6 Measurement Description

System State	Description	Comment
S0: Minimum value	Lowest frequency mode (LFM) with minimum core voltage during desktop idle.	
S0: Maximum value	Highest frequency mode (HFM/Turbo Boost).	The CPU was stressed to its maximum frequency.
S0: Peak value	Highest power spike during the measurement of "S0: Maximum value". This state shows the peak value over a short period of time (worst case power consumption value).	Consider this value when designing the system's power supply to ensure that sufficient power is supplied during worst case scenarios.
S3	Suspend to RAM state.	
S5	Soft-Off state.	
S5e	Enhanced Soft-Off state.	



Note

1. The fan was powered externally.

2. All other peripherals except the LCD monitor were disconnected before measurement.

The tables below provide additional information about the power consumption data for each of the conga-PA7 variants offered. The values are recorded at various operating modes.

Table 7 Power Consumption Values

PN	Memory Size	HW Rev.	BIOS Rev.	OS (64-bit)	CPU			Current (A) @ 12 V				
					Variant	Cores	Base / Burst Freq. (GHz)	S0: Min	S0: Max	S0: Peak	S3	S5
048900	8 GB	A.0	PA70R010	Windows® 10	Atom® x6425E	4	2.0 / 2.7	0.39	2.09	2.48	0.12	0.12
048901	4 GB	A.0	PA70R010	Windows® 10	Atom® x6413E	4	1.5 / 2.7	0.39	1.44	2.36	0.12	0.12
048902	4 GB	A.0	PA70R010	Windows® 10	Atom® x6211E	2	1.3 / 3.0	0.38	0.94	2.13	0.12	0.11
048910	8 GB	A.0	PA70R010	Windows® 10	Atom® x6425RE	4	1.9 / N/A	0.37	1.29	1.40	0.12	0.12
048911	4 GB	A.0	PA70R010	Windows® 10	Atom® x6414RE	4	1.5 / N/A	0.36	1.11	1.30	0.12	0.12
048912	4 GB	A.0	PA70R010	Windows® 10	Atom® x6212RE	2	1.2 / N/A	0.37	0.88	1.10	0.12	0.12
048920	8 GB	A.0	PA70R010	Windows® 10	Pentium® J6426	4	2.0 / 2.7*	0.38	1.78	2.48	0.12	0.11
048921	4 GB	A.0	PA70R010	Windows® 10	Celeron® J6413	4	1.8 / 2.7	0.42	1.68	2.43	0.14	0.14

* Up to 3.0 GHz if only one or two cores are active.



With fast input voltage rise time, the inrush current may exceed the measured peak current.

2.6 Supply Voltage Battery Power

Table 8 CMOS Battery Power Consumption

RTC @	Voltage	Current
-10°C	3 V DC	2.06 µA
20°C	3 V DC	2.27 µA
70°C	3 V DC	3.60 µA



1. Do not use the CMOS battery power consumption values listed above to calculate CMOS battery lifetime.

2. Measure the CMOS battery power consumption in your customer specific application in worst case conditions (for example, during high temperature and high battery voltage).

3. Consider also the self-discharge of the battery when calculating the lifetime of the CMOS battery. For more information, refer to application note AN9_RTC_Battery_Lifetime.pdf on congatec GmbH website at www.congatec.com/support/application-notes.

4. We recommend to always have a CMOS battery present when operating the conga-PA7.

2.7 Environmental Specifications

Temperature (commercial variants)	Operation: 0° to +60°C	Storage: -20° to +80°C
Temperature (industrial variants)	Operation: -40° to +85°C	Storage: -40° to +85°C
Relative Humidity	Operation: 10% to 85%	Storage: 5% to 85%



Caution

The above operating temperatures must be strictly adhered to at all times. When using a congatec heatspreader, the maximum operating temperature refers to any measurable spot on the heatspreader's surface.

Humidity specifications are for non-condensing conditions.

2.8 Storage Specifications

This section describes the storage conditions that must be observed for optimal performance of congatec products.

2.8.1 Module

For long-term storage of the conga-PA7 (more than six months), keep the conga-PA7 in a climate-controlled building at a constant temperature between 5°C and 40°C, with humidity of less than 65% and at an altitude of less than 3000 m. Also ensure the storage location is dry and well ventilated.



Note

We do not recommend storing the conga-PA7 for more than five years under these conditions.

2.8.2 Cooling Solution


The heatpipes of congatec heatspreaders/cooling solutions are filled with water by default. For optimal cooling performance, do not store the heatspreaders/cooling solutions at temperatures below -20°C.



Caution

1. *For temperatures between -10°C and -20°C, preheat the heatpipes before operation. Optionally, the heatpipes can be filled with acetone instead. For more information, contact your local sales representative.*
2. *For optimal thermal dissipation, do not store the congatec cooling solutions for more than six months.*

3 Block Diagram

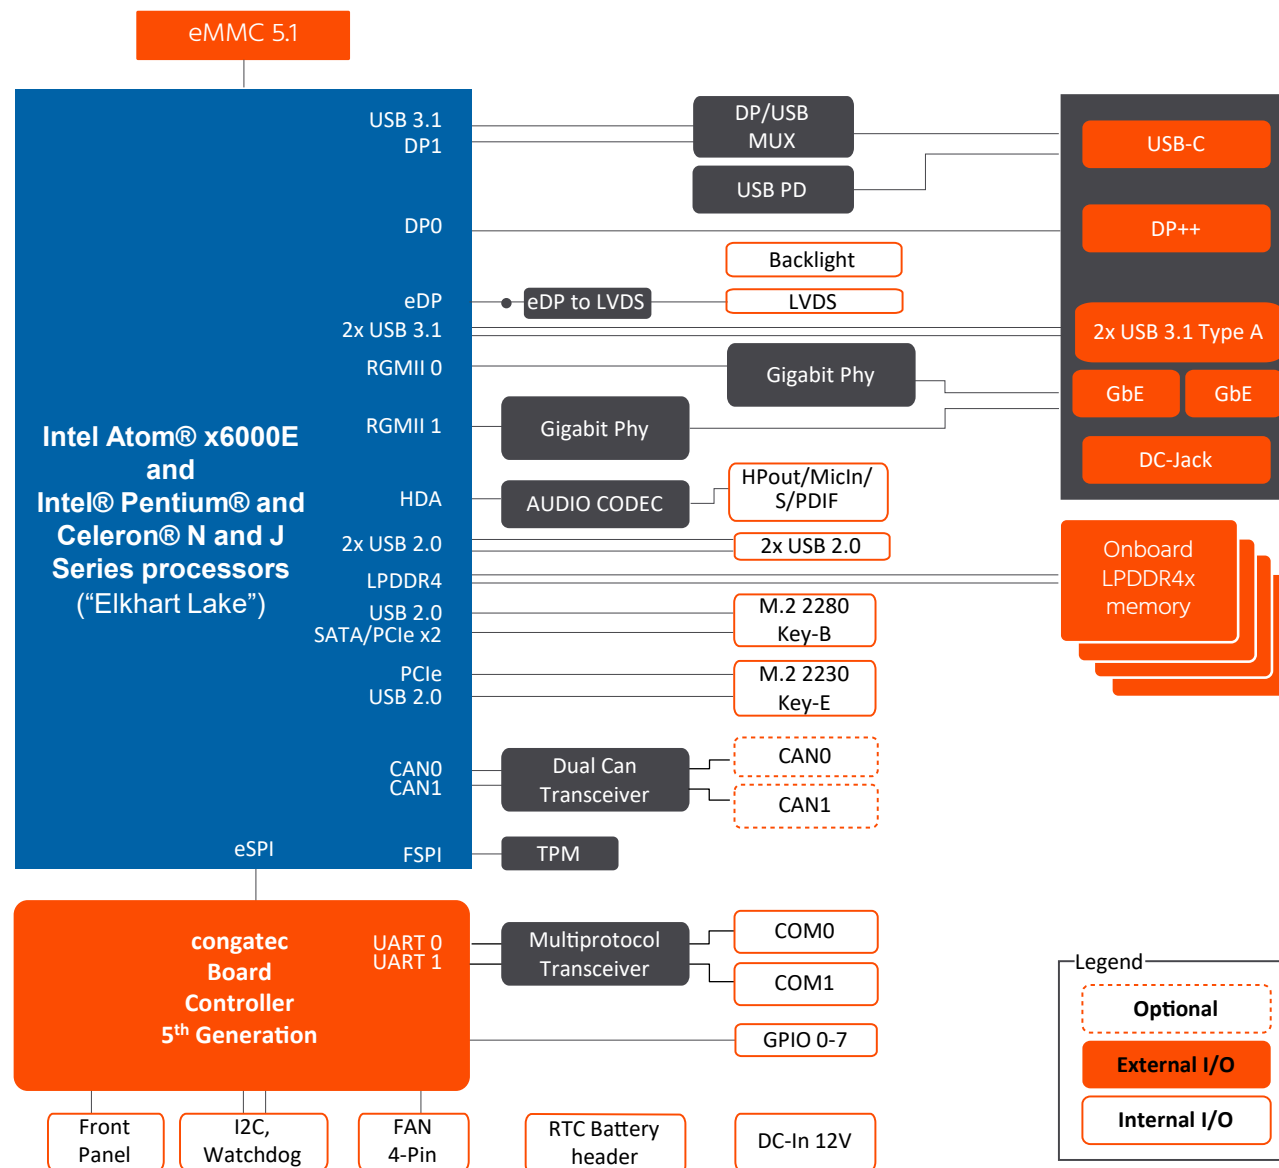

Note: * Assembly options on request only.

4 Cooling Solutions

congatec GmbH offers the cooling solutions listed in Table 3 for conga-PA7. The dimensions of the cooling solutions are shown in the sub-sections. All measurements are in millimeters.



Caution

1. *The congatec heatspreaders/cooling solutions are tested only within the commercial temperature range of 0° to 60°C. Therefore, if your application that features a congatec heatspreader/cooling solution operates outside this temperature range, ensure the correct operating temperature of the module is maintained at all times. This may require additional cooling components for your final application's thermal solution.*
2. *For adequate heat dissipation, use the mounting holes on the cooling solution to attach it to the module. Apply thread-locking fluid on the screws if the cooling solution is used in a high shock and/or vibration environment. To prevent the standoff from stripping or cross-threading, use non-threaded carrier board standoffs to mount threaded cooling solutions.*
3. *For applications that require vertically-mounted cooling solution, use only coolers that secure the thermal stacks with fixing post. Without the fixing post feature, the thermal stacks may move.*
4. *Do not exceed the recommended maximum torque. Doing so may damage the module or the carrier board, or both.*

















Note

1. *We recommend a maximum torque of 0.3 Nm for the mounting screws.*
2. *The gap pad material used on congatec heatspreaders may contain silicon oil that can seep out over time depending on the environmental conditions it is subjected to. For more information about this subject, contact your local congatec sales representative and request the gap pad material manufacturer's specification.*
3. *For optimal thermal dissipation, do not store the congatec cooling solutions for more than six months.*

4.1 CSP Dimensions


PN: 048952

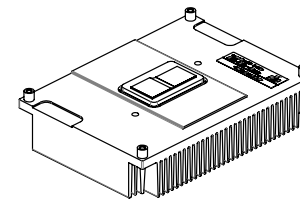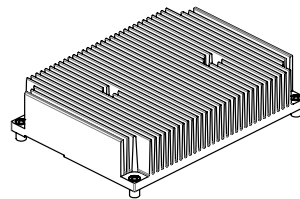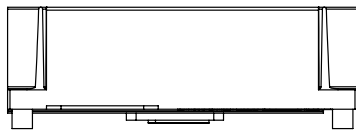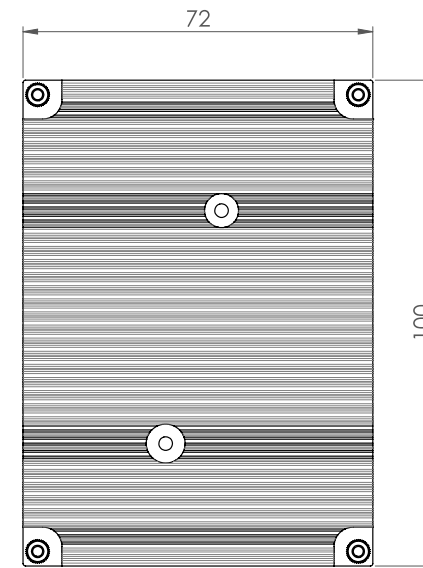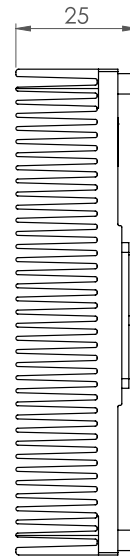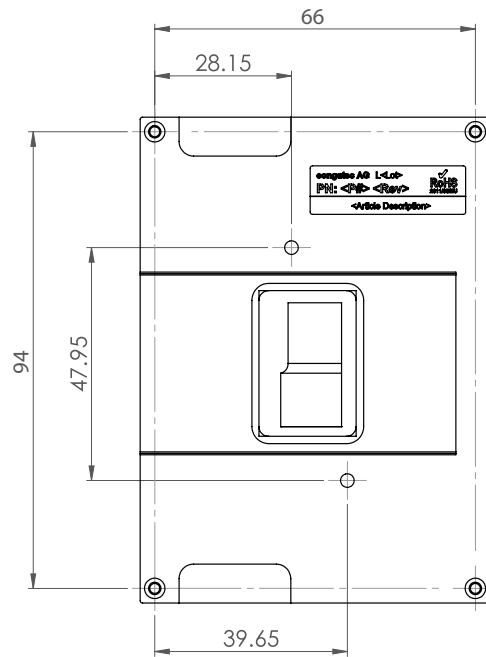

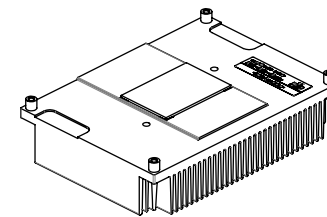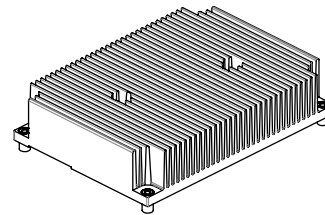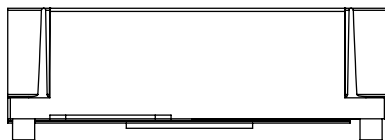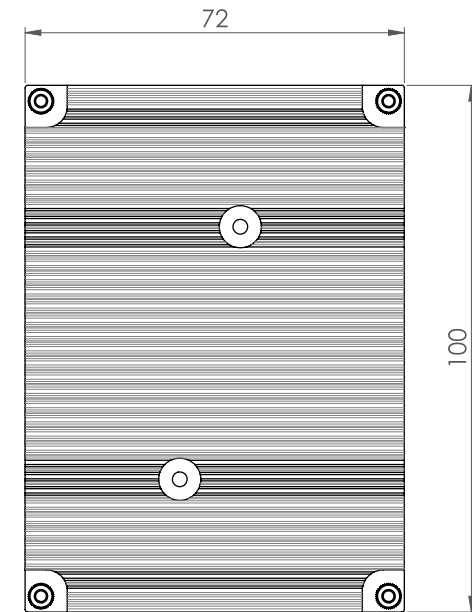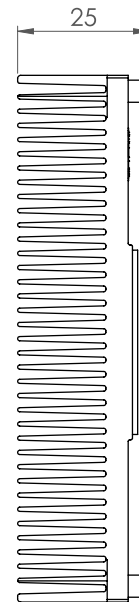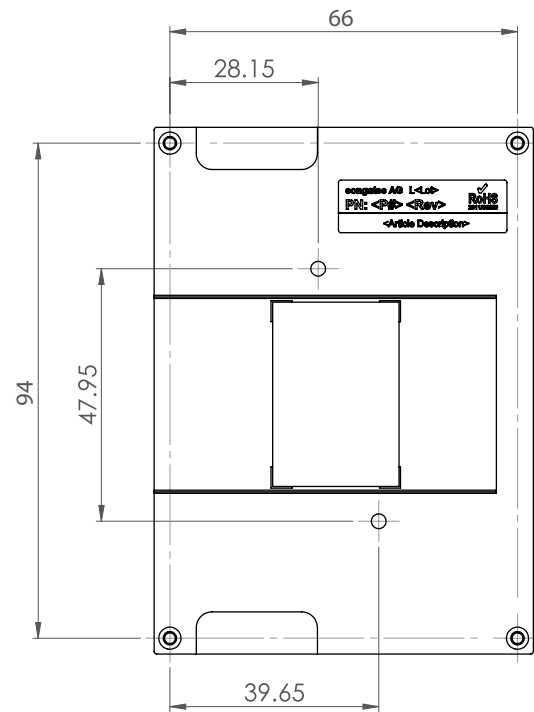

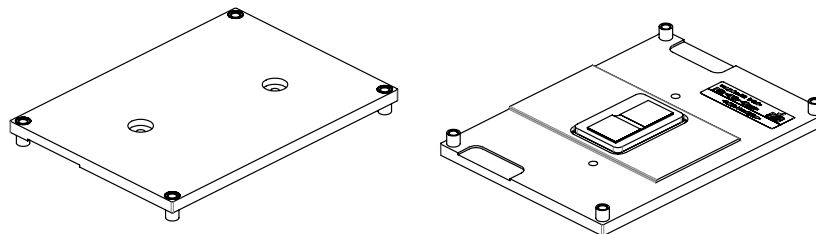



4.2 HSP Dimensions

PN: 048950, 048954


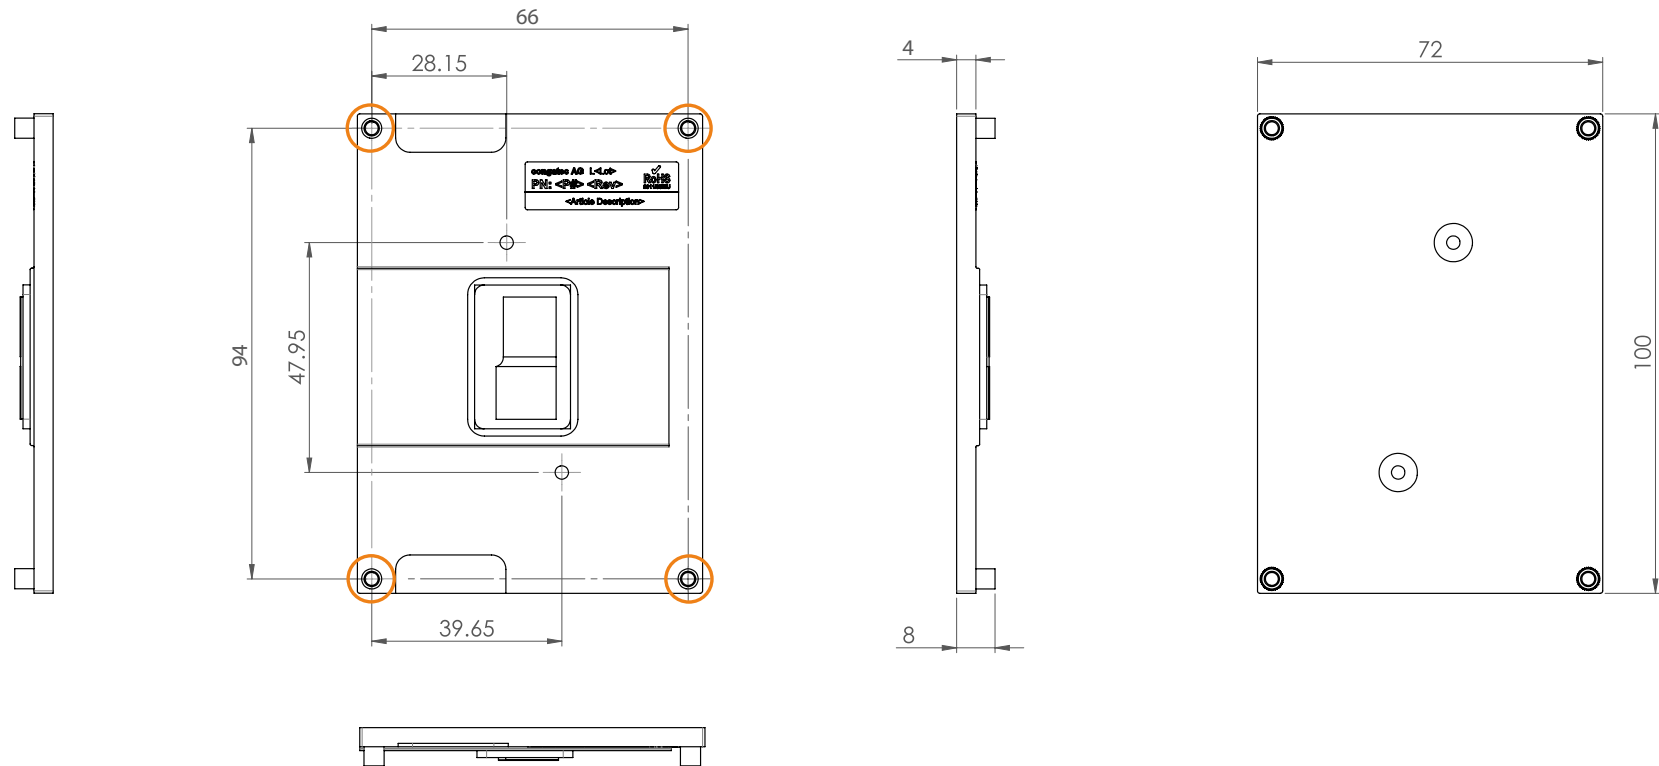


-  M2.5 x 8 mm threaded standoff (PN: 048950)
or
ø2.7 x 8 mm non-threaded standoff (PN: 048954)



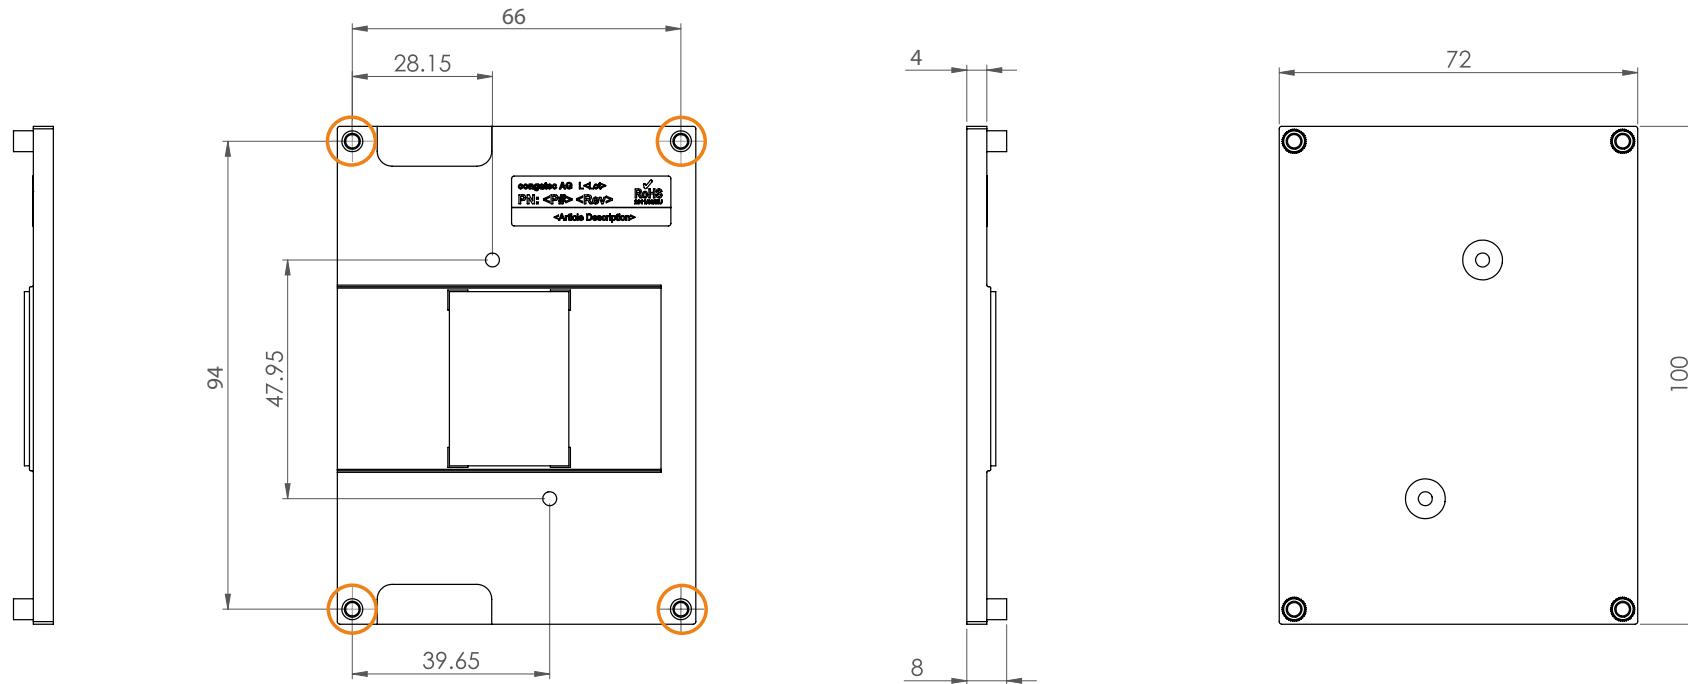

- M2.5 x 8 mm threaded standoff (PN: 048950)
- or
- Ø2.7 x 8 mm non-threaded standoff (PN: 048954)

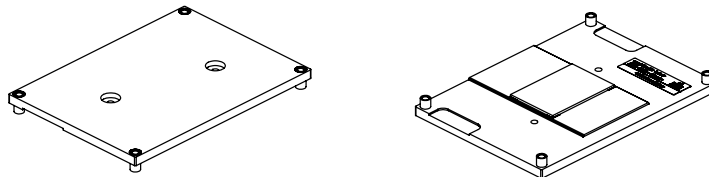

5 Connector Description

5.1 Power Supply Connectors

The conga-PA7 provides a DC power jack, a 2-pin power connector, and a USB Type-C® port to connect a power supply. Only connect one power supply to power the conga-PA7. The required power supply voltage is specified in section 2.4 "Power Supply Voltage".


5.1.1 DC Power Jack

The conga-PA7 provides a standard DC power jack (X21), protected against short transient overvoltage and ESD. Optionally, the conga-PA7 can provide a DC power jack with locking mechanism, including screw type connectors (assembly option).

Table 9 X21 Pinout

Pin	Description
Center Pin	+12V
Sleeve/Barrel	GND

X21

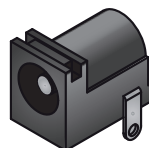

Connector Type

X21: DC power jack, 5.5x2.5 mm diameter


5.1.2 2-Pin Power Connector

The conga-PA7 provides a 2-pin power connector (X22), protected against short transient overvoltage and ESD. Alternatively, this connector can be used as a +12V power output instead.

Table 10 X22 Pinout

Pin	Description
1	+12V
2	GND

X22

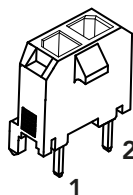

Connector Type


X22: 2x1 pins, 3.00 mm pitch (Molex 43650-0217); Possible Mating Connector: Molex 436450-0200

5.1.3 USB Type-C® Port

The conga-PA7 can be powered via the USB Type-C® port (X9).

Connector Type

X9: USB Type-C® Port

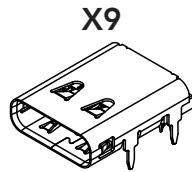

Note

The USB power adapter must supply 12V and enough current for the intended use case (min. 3 A is recommended). Many USB power adapters only supply 5V. The conga-PA7 will not power up if the USB power adapter only supplies 5V.

5.2 Cell Battery Header



The conga-PA7 provides a CR2032 cell battery (BR2330A for industrial variants) connected to header X23.

Table 11 X23 Pinout

Pin	Description
1	+3V
2	GND

Connector Type

X23: 2x1 pins, 1.25 mm pitch (Molex 53398-0271); Possible Mating Connector: Molex 51021-0200

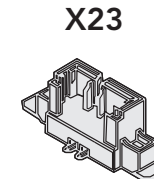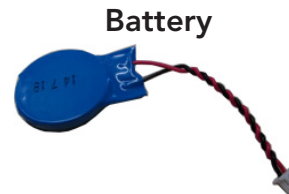

Warning

Danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.



Note

The battery has an adhesive tape on its shrinking tube. This tape enables the system integrator to adequately position the battery in the system case. The functionality of adhesive tape is time limited if exposed to higher temperatures and harsh or vibrant environment. The system integrator must ensure a stable position in this case.

5.3 System State LED

The conga-PA7 provides an onboard bi-color LED (D20) at the top side that indicates the system state as described in the table below:

Table 12 D20 Description


LED	System State
Green	S0 (Working)
Orange	S3 (Sleeping)
Green + Orange (low intensity)	S5 (Soft Off)

5.4 Audio Header

The conga-PA7 provides an HD audio header (X6). The signals are routed from an HD audio codec (TSI 92HD91B).

Table 13 X6 Pinout

Pin	Default Signal	Description
1	MIC_L	Analog Microphone Input - Left Channel
2	GND_HDA	Audio Ground
3	MIC_R	Analog Microphone Input - Right Channel
4	+V5	+5V Power Supply (for external speaker amplifier; max. 1 A shared with pin 10)
5	MIC_JD	Microphone Jack Detection
6	HP_R	Headphone Line Out - Right Channel
7	GND_HDA	Audio Ground
8	HP_L	Headphone Line Out - Left Channel
9	HP_JD	Headphone Jack Detection
10	+V5	+5V Power Supply (for S/PDIF optical transmitter; max. 1 A shared with pin 4)
11	GND	Digital Ground for S/PDIF and an external class-D amplifier
12	SPDIF_OUT	S/PDIF Output (3.3V)

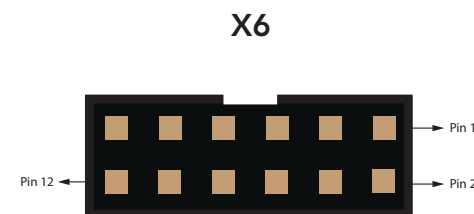

Connector Type


X6: 6x2 pins, 2.0 mm pitch, box header

5.5 USB Interfaces

The conga-PA7 provides two USB Type-A ports, one USB Type-C® port, and one header for two additional USB 2.0 ports. USB 2.0 signals are also routed to the M.2 Key-B (X10) and M.2 Key-E (X11) connectors.

5.5.1 USB Type-A Ports

The conga-PA7 provides two USB Type-A ports (X7) with support for USB 3.1 Gen 2 (up to 10 Gbps) and USB wake (configurable in BIOS menu). Each port can supply up to 1 A.

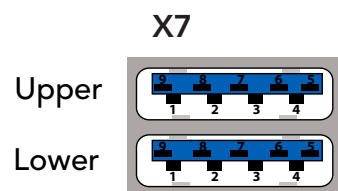


Connector Type

X7: Dual-stacked USB Type-A Ports

5.5.2 USB Type-C® Port

The conga-PA7 provides one USB Type-C® port (X9) with support for:

- USB 3.1 Gen 2 (up to 10 Gbps)
- Power Delivery (up to 5V @ 3A)
- DP Alt Mode (up to 4K @ 60Hz with a 4-lane adapter)
- USB wake

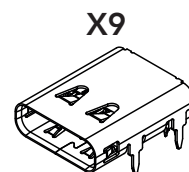

Connector Type


X9: USB Type-C® Port

5.5.3 USB 2.0 Header

The conga-PA7 provides a header (X8) for two external USB 2.0 ports with support for USB wake (configurable in BIOS menu).

Table 14 X8 Pinout

Port 1			Port 2		
Pin	Signal	Description	Pin	Signal	Description
1	+5V	+5V supply	2	+5V	+5V supply
3	Data1-	Hi-speed differential signal (negative)	4	Data2-	Hi-speed differential signal (negative)
5	Data1+	Hi-speed differential signal (positive)	6	Data2+	Hi-speed differential signal (positive)
7	GND	Ground	8	GND	Ground
9	SH	Shield Ground	10	SH	Shield Ground

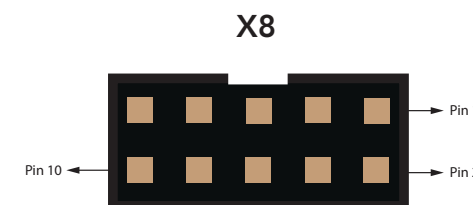

Connector Type

X8: 5x2 pins, 2.00 mm pitch (Molex 87832-1014); Possible Mating Connector: Molex 51110-1051

5.6 Ethernet Ports

The conga-PA7 provides two Ethernet ports (X12, X13) with support for:

- Gigabit Ethernet (GbE)
- Wake-on-LAN (WOL)
- Time-Sensitive Networking (TSN)
- Out-Of-Band Management (OOB)




Note The real-time trigger signals are provided on feature connector X20. For more information, see section 6.2.3 "GPIOs and Real-Time Trigger Signals".

Table 15 X12, X13 Description

LED Left Side	Description	LED Right Side	Description
Off	10 Mbps link speed	Off	No link
Green	100 Mbps link speed	Steady On	Link established, no activity detected
Orange	1000 Mbps link speed	Blinking	Link established, activity detected

X12, X13

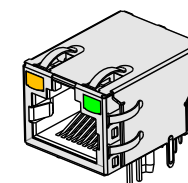

Connector Type

X12, X13: 8-pin RJ45 connector with Gigabit magnetic and LEDs


5.7 Display Interfaces

The conga-PA7 supports up to three displays via one DP++ port, one DP over USB Type-C® port, and one LVDS header.

5.7.1 DP++ Port

The conga-PA7 provides one DP++ port (X5) with support for up to 4K @ 60Hz (DP 1.4).

X5

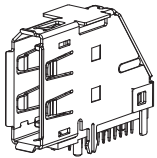


Connector Type

X5: Full-Size DisplayPort Connector

5.7.2 USB Type-C® Port

The conga-PA7 provides one USB Type-C® port (X9) with support for DP Alt Mode up to 4K @ 60Hz.

X9

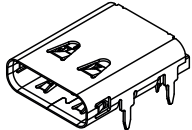

Connector Type

X9: USB Type-C® port


5.7.3 LVDS Header

The conga-PA7 provides an LVDS header (X3) via an eDP to LVDS bridge by default. It supports 18/24-bit single/dual channel, selectable LCD voltage, VESA color mappings, automatic panel detection and resolution up to 1920x1200 @ 60 Hz in dual LVDS mode.

If eDP or MIPI-DSI is required instead of LVDS, contact congatec technical support.

Table 16 X3 Pinout

Pin	Signal	Pin	Signal
1	GND	2	GND
3	LVDS_EVEN_TX3P / eDP_TX3P	4	LVDS_ODD_TX3P
5	LVDS_EVEN_TX3N / eDP_TX3N	6	LVDS_ODD_TX3N
7	GND	8	GND
9	LVDS_EVEN_TX2P / eDP_TX2P	10	LVDS_ODD_TX2P
11	LVDS_EVEN_TX2N / eDP_TX2N	12	LVDS_ODD_TX2N
13	GND	14	GND
15	LVDS_EVEN_TX1P / eDP_TX1P	16	LVDS_ODD_TX1P
17	LVDS_EVEN_TX1N / eDP_TX1N	18	LVDS_ODD_TX1N
19	GND	20	GND
21	LVDS_EVEN_TX0P / eDP_TX0P	22	LVDS_ODD_TX0P
23	LVDS_EVEN_TX0N / eDP_TX0N	24	LVDS_ODD_TX0N
25	GND	26	GND
27	LVDS_EVEN_CLKP / eDP_AUXP	28	LVDS_ODD_CLKP
29	LVDS_EVEN_CLKN / eDP_AUXN	30	LVDS_ODD_CLKN
31	GND	32	GND
33	DDC_DAT (EDID, 3.3V level bidirectional)	34	DDC_CLK (EDID, 3.3V level output)
35	VCC (+3.3V or +5V, fuse with 1A hold current)	36	VCC (+3.3V or +5V, fuse with 1A hold current)
37	+3.3V for EDID (optional)	38	VCC (+3.3V or +5V, fuse with 1A hold current)
39	VDDEN (output, 3.3V level)	40	eDP_HPDP# (optional)

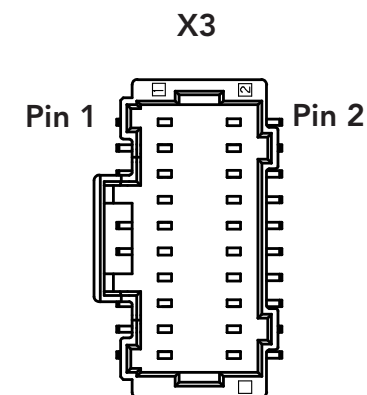

Connector Type

X3: 40 pins, 1.00 mm pitch (Molex 501190-4017); Possible Mating Connector: Molex 501189-4010

Note


1. For a single channel LVDS panel, use the LVDS_ODD pins.
2. congatec offers an LVDS cable for 17" AUO Optonics G170EG01 V.1 panel only (see section Table 4 "Cables").

5.7.3.1 Backlight Power Header

The conga-PA7 provides a backlight power header (X4) with support for 12V and 5V.

Table 17 X4 Pinout

Pin	Signal	Description
1	+12V	12V Backlight inverter power
2	+12V	12V Backlight inverter power
3	GND	Ground
4	GND	Ground
5	BKLTCTL_5V	Backlight PWM control (+5V)
6	BKLTEN_5V	Backlight Enable (+5V)
7	BKLTEN	Backlight Enable (+3.3V)
8	BKLTCTL	Backlight PWM control (+3.3V)
9	+5V	Power rail with +5V
10	+5V	Power rail with +5V

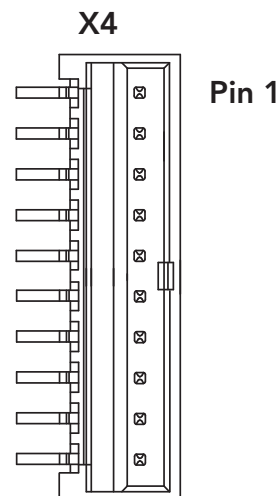

Connector Type

X4: 10x1 pins, 1.5 mm pitch (Molex 87437-1043); Possible Mating Connector: Molex 87439-1000

Note

Pin 1 and 2 share a 1.5 A resettable fuse. Pin 9 and 10 share a 1.1 A resettable fuse.

5.7.3.2 Panel Power Jumper

The conga-PA7 supports 3.3V and 5V LVDS panels. Set the panel voltage (X3 pins 35, 36, and 38) with jumper X24.

Table 18 X24 Settings

Pin	Setting
1 - 2	3.3V
2 - 3	5V

X24



Connector Type

X24: 3x1-pin, 2.00 mm pitch


5.8 COM Ports

The conga-PA7 provides two COM ports (X15, X16) on the bottom side. Both ports are routed from the congatec Board Controller (cBC) through a transceiver (ISL3333) and support RS232, RS422, and RS485.

X15, X16

Table 19 X15, X16 Pinout

Pin	RS232 Signal	RS422 / RS485 Signal
1	GND	GND
2	TXD	TX-
3	RTS#	TX+
4	CTS#	RX+
5	RXD	RX-

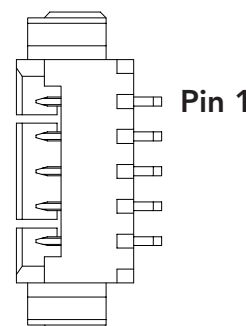

Connector Type

X15, X16: 5x1 pins, 1.25 mm pitch (Molex 53261-0571); Possible Mating Connector: Molex 51021-0500



Caution

1. If termination is required, a 120 Ohm termination resistor must be added externally across pin 4 (RX+) and 5 (RX-).
2. For RS485 mode, TX and RX signals must be coupled externally.



Note

1. The port modes can be configured in the BIOS setup menu (default mode: RS232).
2. RS485 mode provides echo cancellation.
3. RS422 and RS485 modes do not provide galvanic isolation.
4. RS485 mode uses Automatic Direction Control and it is based on a delay circuit triggered by the TXD signal. Therefore, a small delay is present after sending data and before TX output of the transceiver is disabled (typ. 2ms).
5. RS485 mode supports transfer rate 9600kbps or higher. Lower transfer rates are not supported by design.
6. congatec offers adapter cables for the COM port headers. For more information, see Table 4.

5.9 CAN Ports

Optionally, the conga-PA7 can provide two CAN ports (X1, X2) on the bottom side (assembly option) with support for:


- ISO 11898-1 (Identical to Bosch CAN protocol specification 2.0 part A, B)
- ISO 11898-4 (Time-triggered communication)
- CAN FD protocol specification 1.0

Both ports are connected to the SoC via a transceiver (TCAN1046V-Q1) and share a resettable 500 mA fuse.

Table 20 X1, X2 Pinout

Pin	Signal
1	+12V (shared 500 mA fuse for X1 and X2)
2	CAN H
3	CAN L
4	GND

X1, X2

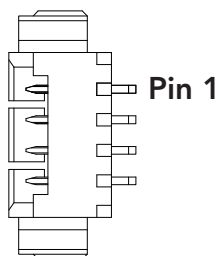

Connector Type

X1, X2: 4x1 pins, 1.25 mm pitch (Molex 53261-0471); Possible Mating Connector: Molex 51021-0400



Caution

A 120 Ohm termination resistor must be added externally across pin 2 (CAN H) and 3 (CAN L).



Note

The silicon vendor supports CAN ports in Yocto Operating System only.


5.10 M.2 Key-B

The conga-PA7 provides an M.2 Key-B connector (X10) for 2280 sized cards with support for PCIe Gen3 x2, SATA 6 Gb/s, and USB 2.0. Optionally, the conga-PA7 can support 3042/2242 sized cards instead (assembly option).

Table 21 X10 Pinout

Pin	Signal	Pin	Signal
2	3.3V	1	CONFIG_3
4	3.3V	3	GND
6	FULL_CARD_POWER_OFF# (O)(0/1.8V or 3.3V)	5	GND
8	W_DISABLE1# (O)(0/3.3V)	7	USB_D+
10	NC	9	USB_D-
	Key-B	11	GND
	Key-B		Key-B
	Key-B		Key-B
	Key-B		Key-B
	Key-B		Key-B
20	NC	21	NC
22	NC	23	NC
24	NC	25	NC
26	NC	27	GND
28	NC	29	PERn1
30	NC	31	PERp1
32	NC	33	GND
34	NC	35	PETn1
36	NC	37	PETp1
38	DEVSLP (O)	39	GND
40	NC	41	PERn0 / SATA RX+
42	NC	43	PERp0 / SATA RX-
44	NC	45	GND
46	NC	47	PETn0 / SATA TX-
48	NC	49	PETp0 / SATA TX+
50	PERST# (O) (0/3.3V)	51	GND
52	CLKREQ# (I/O) (0/3.3V)	53	REFCLKn

X10

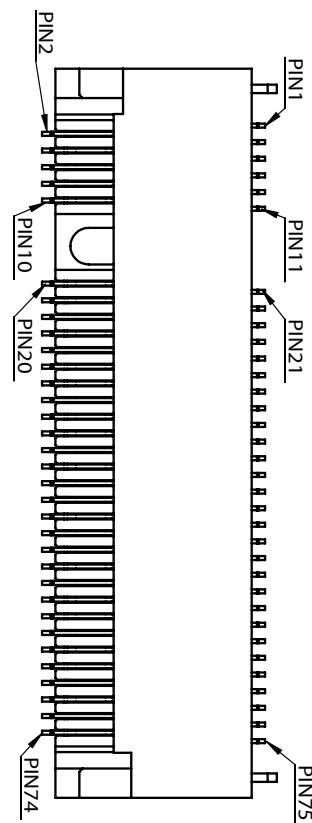

54	NC	55	REFCLKp
56	NC	57	GND
58	NC	59	NC
60	COEX3	61	NC
62	COEX2	63	NC
64	COEX1	65	NC
66	NC	67	RESET# (O)(0/1.8V)
68	NC	69	CONFIG_1
70	3.3V	71	GND
72	3.3V	73	GND
74	3.3V	75	CONFIG_2



Connector Type

X10: M.2 Key-B Connector



Note

I/O directions are for the conga-PA7 and not a card.


5.11 M.2 Key-E

The conga-PA7 provides an M.2 Key-E connector (X11) for 2230 sized cards with support for PCIe Gen3 x1 and USB 2.0.

Table 22 X11 Pinout

Pin	Signal	Pin	Signal
2	3.3V	1	GND
4	3.3V	3	USB_D+
6	LED_1# (I)(OD)	5	USB_D-
8	NC	7	GND
10	NC	9	NC
12	NC	11	NC
14	NC	13	NC
16	NC	15	NC
18	GND	17	NC
20	NC	19	NC

22	NC	21	NC
	Key-E	23	NC
	Key-E		Key-E
	Key-E		Key-E
	Key-E		Key-E
	Key-E		Key-E
32	NC	33	GND
34	NC	35	PETp0
36	NC	37	PETn0
38	NC	39	GND
40	NC	41	PERp0
42	NC	43	PERn0
44	COEX3	45	GND
46	COEX2	47	REFCLKp0
48	COEX1	49	REFCLKn0
50	NC	51	GND
52	PERST0# (O)(0/3.3V)	53	CLKREQ0# (I/O)(0/3.3V)
54	W_DISABLE2# (O)(0/3.3V)	55	PEWAKE0# (I/O)(0/3.3V)
56	W_DISABLE1# (O)(0/3.3V)	57	GND
58	NC	59	NC
60	NC	61	NC
62	NC	63	GND
64	NC	65	NC
66	NC	67	NC
68	NC	69	GND
70	NC	71	NC
72	3.3V	73	NC
74	3.3V	75	GND

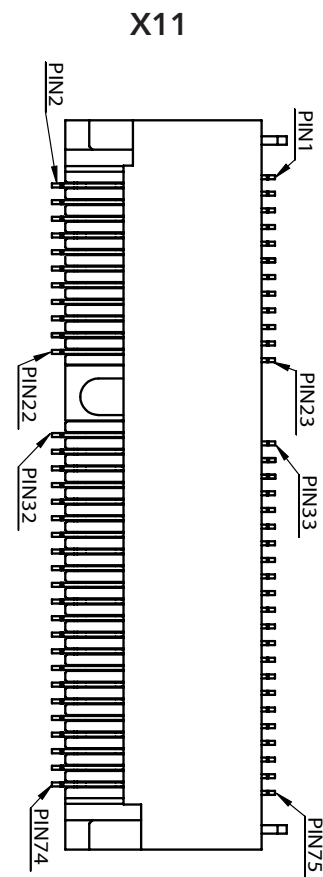

Connector Type

X11: M.2 Key-E Connector




I/O directions are for the conga-PA7 and not a card.

5.12 CPU Fan Header

The conga-PA7 provides a standard 4-pin 12V CPU fan header (X17) with support for PWM control and tachometer.

Table 23 X17 Pinout

Pin	Signal
1	GND
2	+12VDC (resettable 500 mA fuse)
3	FAN_TACHOIN
4	FAN_CTRL

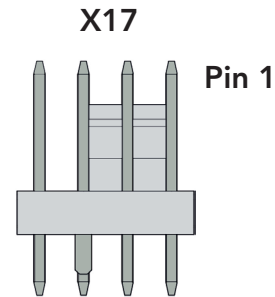

Connector Type


X17: Standard 4-pin, 2.54 mm pitch fan header

5.13 BIOS Flash Header

The conga-PA7 provides a BIOS flash header (X14) for debug and service purposes only.

Table 24 X14 Pinout

Pin	Signal	Pin	Signal
1	CS0#	2	+1.8V
3	MISO	4	IO3
5	IO2	6	CLK
7	GND	8	MOSI
9	BIOS_ALT#	10	UART1_TXD

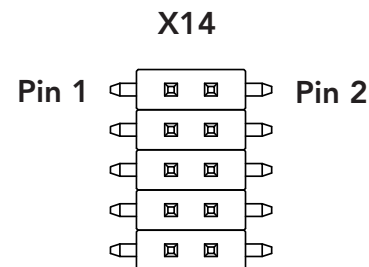

Connector Type

X14: 5x2 pins, 1.27 mm pitch

6 Additional Features

6.1 Integrated Real-Time Hypervisor

The RTS Hypervisor is integrated into the congatec firmware on the conga-PA7 by default. With the RTS Hypervisor, you can consolidate functionality that previously required multiple dedicated systems on a single x86 hardware platform.

The integrated RTS Hypervisor offers a 30-day free evaluation license. The 30-day evaluation starts when the customer receives the x86-based modules. To access the full package, contact congatec Sales team via the online "Request Quote" button for your particular product at <https://www.congatec.com/en/products/hypervisor-products/>.

To activate the RTS Hypervisor, change the "Boot Device" in the BIOS setup menu to "Integrated RTS Hypervisor".

1. Press F2 or DEL during POST to enter the BIOS setup menu.
2. Go to the Boot tab to enter the Boot setup screen.
3. Select "Integrated RTS Hypervisor" as "1st Boot Device".
4. Go to the Save & Exit tab and select "Save Changes and Exit".

For more information about the integrated Hypervisor, see the congatec Application Note AN56_Hypervisor_on_Module.pdf on the congatec website at <https://www.congatec.com/en/support/application-notes/>.



Note

1. The configuration steps and the BIOS setup menu above are valid for "Type Based Boot Priority". For "UEFI Boot Priority", the BIOS setup menu may differ.
2. The Real-Time Operating System images, driver packages for the General-Purpose Operating System and the installation procedures for the Operating Systems are available for download under the "Technical information" section, in the restricted area of congatec website at www.congatec.com/login. If you require login access, contact your local sales representative.

6.2 Feature Connectors

The conga-PA7 provides three feature connectors (X18, X19, and X20).


6.2.1 Buttons and LEDs

The conga-PA7 offers lid, sleep, reset, power buttons, and LED signals via the feature connector X18 as described in the table below:

Table 25 X18 Pinout

Pin	Default Signal	Assembly Option	Description
1	LID_BTN#	INTRUDER#	Active-low signal brings the system into sleep state or wakes it up. Requires an ACPI compatible operating system. Assembly option: Connect to INTRUDER# of SoC.
2	GND		Ground
3	SLP_BTN#		Active-low signal triggers sleep state.
4	GND		Ground
5	RST_BTN#		Active-low signal triggers hard reset. Does not keep the system in reset when connected to ground.
6	GND		Ground
7	PWR_BTN#		Active-low signal triggers power-up sequence. Pulse duration of ≥ 4 seconds triggers forced shutdown. Signal can also be triggered by the cBC depending on BIOS settings (see section 6.5.2 "Power Loss Control").
8	GND		Ground
9	Main color LED (anode) / Alt color LED (cathode)		Bidirectional power LED is supported. Main color indicates runtime mode (S0). Alternate color indicates sleep mode (S3, suspend to RAM).
10	Main color LED (cathode) / Alt color LED (anode)		
11	WiFi_LED (anode)	WWAN_LED (anode)	LED indicates activity on M.2 Key-E interface. Assembly option: LED indicates activity on M.2 Key-B interface.
12	WiFi_LED# (cathode)	WWAN_LED# (cathode)	

X18

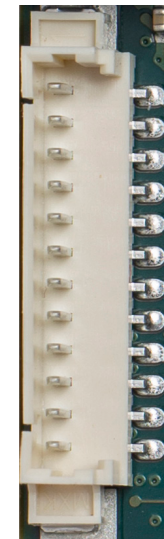

Pin 1

Connector Type

X18: 12x1 pins, 1.25 mm pitch (Molex 53398-1271); Possible Mating Connector: Molex 51021-1200

Note


1. The LEDs on the conga-PA7 are supplied by +3.3 V with 324 Ohm series resistors. LED terminals can be directly to the X18 pins.
2. The buttons are edge triggered with 16 ms debouncing and can be directly connected to a tactile switch or OC output.

6.2.2 I2C and Watchdog

The conga-PA7 provides I2C, batlow, and watchdog signals via the feature connector X19 as described in the table below:

Table 26 X19 Pinout

Pin	Default Signal	Assembly Option	Description
1	BATLOW#		Battery low input, 10k PU to +3.3V standby, OC or OD output must be used to drive the signal, active low.
2	+3.3V Standby		+3.3V power output (active in standby/suspend)
3	PM THRM#	PLT RST#	External event signal (thermal event), 10k PU to +3.3V runtime, OC or OD output must be used to drive the signal, active low. Assembly option: Platform reset signal output, active low.
4	I2C_CLK		I2C clock output
5	I2C_DAT		I2C data
6	GND		Ground
7	WDTRIG#	SLP S3#	Watchdog trigger input signal, 10k PU to +3.3V runtime, OC or OD output is recommended to use, active low. Assembly option: SLP S3 output, active low.
8	WDOUT	SLP S4#	Watchdog output from board controller, 100k PD. Assembly option: SLP S4 output, active low.

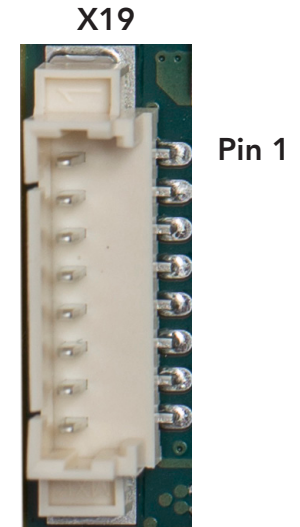

Connector Type

X19: 8x1 pins, 1.25 mm pitch (Molex 53398-0871); Possible Mating Connector: Molex 51021-0800

Note


1. A resettable fuse limits the 3.3V power budget of connector X19 (pin 2) and X20 (pin 10) to a total of 500 mA hold current.
2. The signals are 3.3V compatible.

6.2.3 GPIOs and Real-Time Trigger Signals

The conga-PA7 provides GPIOs and real-time trigger signals via the feature connector X20 as described in the table below:

Table 27 X20 Pinout

Pin	Default Signal	Assembly Option	Description
1	GPIO 0		GPIO 0 from board controller, 10k PU to +3.3V standby.
2	GPIO 1		GPIO 1 from board controller, 10k PU to +3.3V standby.
3	GPIO 2		GPIO 2 from board controller, 10k PU to +3.3V standby
4	GPIO 3		GPIO 3 from board controller, 10k PU to +3.3V standby.
5	GND		Ground
6	GPIO 4		GPIO 4 from board controller, 10k PU to +3.3V standby.
7	GPIO 5		GPIO 5 from board controller, 10k PU to +3.3V standby.
8	GbE0 TRIG	GPIO 6	IEEE 1588 trigger signal output, GbE 0 port. Assembly Option: GPIO 6 from board controller, 10k PU to +3.3V standby.
9	GbE1 TRIG	GPIO 7	IEEE 1588 trigger signal output, GbE 1 port. Assembly Option: GPIO 7 from board controller, 10k PU to +3.3V standby
10	+3.3V standby		+3.3V power output (active in standby/suspend).

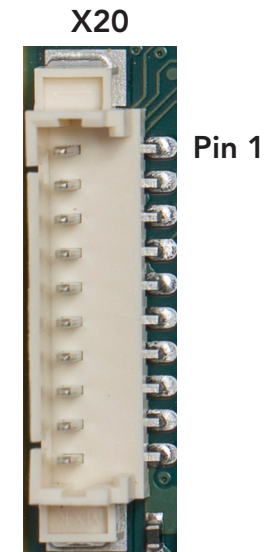

Connector Type

X20: 10x1 pins, 1.25 mm pitch (Molex 53398-1071); Possible Mating Connector: Molex 51021-1000

Note

A fuse limits the 3.3V power budget of connector X19 (pin 2) and X20 (pin 10) to a total of 500 mA hold current.

6.3 DRAM

The conga-PA7 provides onboard LPDDR4x memory. The default memory size and speed of each variant is listed in section 1.2 "conga-PA7". Optionally, the conga-PA7 can provide up to 16 GB LPDDR4x @ 3.733 MT/s (assembly option).

6.4 Flash Storage

The conga-PA7 provides onboard eMMC 5.1 flash storage. The default storage capacity of each variant is listed in section 1.2 "conga-PA7". Optionally, the conga-PA7 can provide up to 128 GB flash storage (assembly option).

6.5 congatec Board Controller (cBC)

The conga-PA7 is equipped with a Microchip Technology microcontroller. This onboard microcontroller plays an important role for most of the congatec BIOS features. The cBC fully isolates some of the embedded features such as system monitoring, I²C bus from the x86 core architecture. This improves performance and reliability, even during low power mode.

6.5.1 Fan Control

The congatec Board Controller on the conga-PA7 controls the power supply to the fan with the PWM signal.

6.5.2 Power Loss Control

The cBC provides the power loss control feature. The power loss control feature determines the behaviour of the system after a power loss occurs. The power loss control feature has three different modes that define how the system responds when power is restored after a power loss occurs. The modes are:

- Turn On: The system is turned on after a power loss condition
- Remain Off: The system is kept off after a power loss condition
- Last State: The board controller restores the last state of the system before the power loss condition



Note

1. If a power loss condition occurs within 30 seconds after a regular shutdown, the cBC may incorrectly set the last state to "ON".
2. The 30 seconds monitoring cycle applies only to the "Last State" power loss control mode.

6.5.3 Board Information

The cBC provides a rich data-set of manufacturing and board information such as serial number, EAN number, hardware and firmware revisions, and so on. It also keeps track of dynamically changing data like runtime meter and boot counter.

6.5.4 Enhanced Soft-Off State

The conga-PA7 supports an enhanced Soft-Off state (S5e)—a congatec proprietary low-power Soft-Off state. In this state, the SBC switches off almost all the onboard logic in order to reduce the power consumption to absolute minimum (approximately 1.4 mA). The S5e supports power button and sleep button wake events. Refer to congatec application note AN36_S5e_Implementation.pdf for detailed description of the S5e state.

6.6 OEM BIOS Customization

The conga-PA7 is equipped with congatec Embedded BIOS, which is based on American Megatrends Inc. Aptio UEFI firmware. The congatec Embedded BIOS allows system designers to modify the BIOS. For more information about customizing the congatec Embedded BIOS, refer to the congatec System Utility user's guide CGUTLm1x.pdf at www.congatec.com or contact technical support. The customization features supported are described in the following sections.

6.6.1 OEM Default Settings

This feature allows system designers to create and store their own BIOS default configuration. Customized BIOS development by congatec for OEM default settings is no longer necessary because customers can easily perform this configuration by themselves using the congatec system utility CGUTIL. See congatec application note AN8_Create_OEM_Default_Map.pdf on the congatec website for details on how to add OEM default settings to the congatec Embedded BIOS.

6.6.2 OEM Boot Logo

This feature allows system designers to replace the standard text output displayed during POST with their own BIOS boot logo. Customized BIOS development by congatec for OEM Boot Logo is no longer necessary because customers can easily perform this configuration by themselves using the congatec system utility CGUTIL. See congatec application note AN8_Create_And_Add_Bootlogo.pdf on the congatec website for details on how to add OEM boot logo to the congatec Embedded BIOS.

6.6.3 OEM POST Logo

This feature allows system designers to replace the congatec POST logo displayed in the upper left corner of the screen during BIOS POST with their own BIOS POST logo. Use the congatec system utility CGUTIL 1.5.4 or later to replace/add the OEM POST logo.

6.6.4 OEM BIOS Code/Data

With the congatec embedded BIOS, it used to be possible for system designers to add their own code to the BIOS POST process. This feature is no longer supported with the new UEFI based firmware.

6.6.5 OEM DXE Driver

This feature allows designers to add their own UEFI DXE driver to the congatec embedded BIOS. Contact congatec technical support for more information on how to add an OEM DXE driver.

6.7 congatec Battery Management Interface

In order to facilitate the development of battery powered mobile systems based on embedded modules, congatec has defined an interface for the exchange of data between a x86 CPU module (using an ACPI operating system) and a Smart Battery system. A system developed according to the congatec Battery Management Interface Specification can provide the battery management functions supported by an ACPI capable operating system (e.g. charge state of the battery, information about the battery, alarms/events for certain battery states, ...) without the need for any additional modifications to the system BIOS.

In addition to the ACPI-compliant Control Method Battery mentioned above, the latest versions of the conga-PA7 BIOS and board controller firmware also support the LTC1760 battery manager from Linear Technology and a battery only solution (no charger). All three battery solutions are supported on the I2C bus. This gives the system designer more flexibility when choosing the appropriate battery sub-system.

For more information about the supported Battery Management Interface contact your local congatec sales representative.

6.8 API Support (CGOS)

In order to benefit from the above mentioned non-industry standard feature set, congatec provides an API that allows application software developers to easily integrate all these features into their code. The CGOS API (congatec Operating System Application Programming Interface) is the congatec proprietary API that is available for all commonly used Operating Systems such as Win32, Win64, Win CE, Linux. The architecture of the CGOS API driver provides the ability to write application software that runs unmodified on all congatec CPU modules. All the hardware related code is contained within the congatec embedded BIOS on the module. See section 1.1 of the CGOS API software developers guide, which is available on the congatec website.

6.9 Thermal/Voltage Monitoring

The congatec Board Controller monitors the +12V input voltage, input current and two onboard thermal sensors. The CPU temperature is measured by its internal sensor.


6.10 External System Wake Event

The conga-PA7 supports USB, LAN, power/sleep/LID buttons and PCIe driven wake up events.

6.11 Security Features

The conga-PA7 provides an onboard TPM 2.0 chip (Infineon SLB9672) connected to the SPI interface.

7 Mechanical Drawing

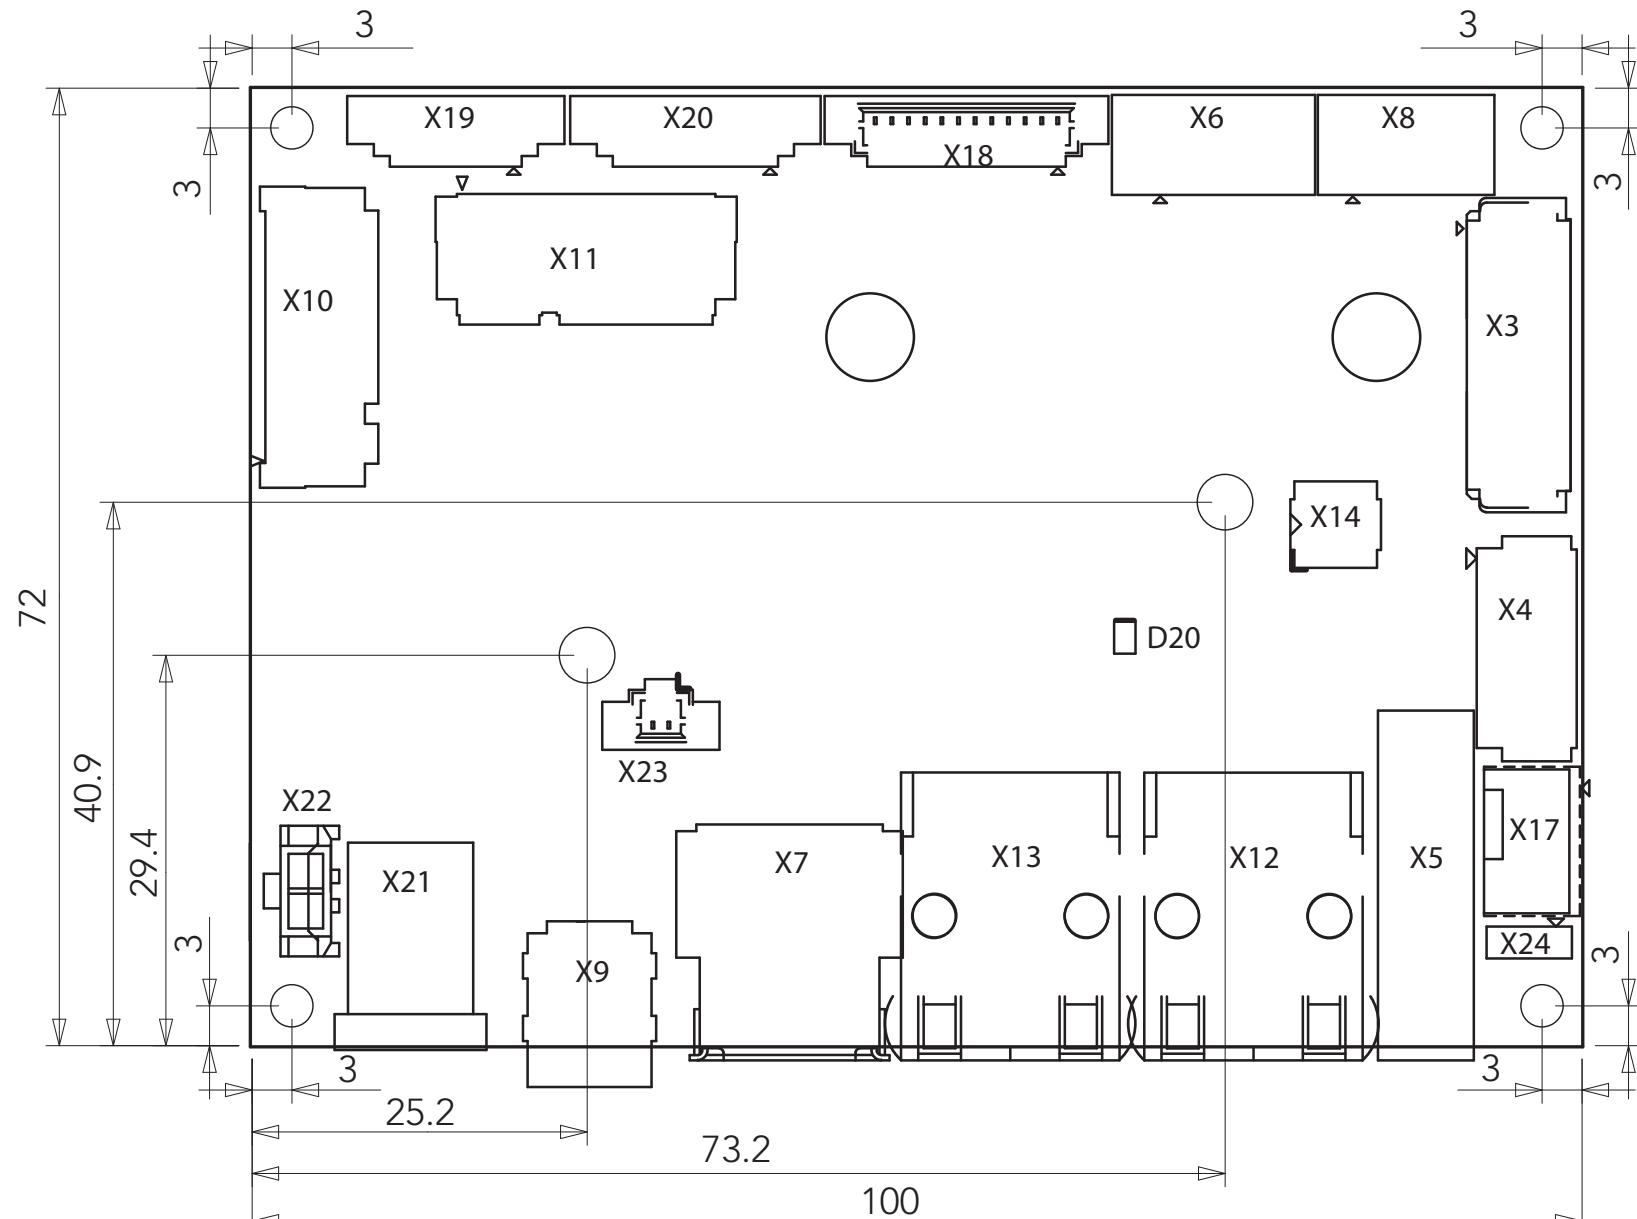

8 BIOS Setup Description

The BIOS setup description of the conga-PA7 can be viewed without having access to the SBC. However, access to the restricted area of the congatec website is required in order to download the necessary tool (CgMlfViewer) and Menu Layout File (MLF).

The MLF contains the BIOS setup description of a particular BIOS revision. The MLF can be viewed with the CgMlfViewer tool. This tool offers a search function to quickly check for supported BIOS features. It also shows where each feature can be found in the BIOS setup menu.

For more information, read the application note "AN42 - BIOS Setup Description" available at www.congatec.com.



Note

If you do not have access to the restricted area of the congatec website, contact your local congatec sales representative.

8.1 Navigating the BIOS Setup Menu

The BIOS setup menu shows the features and options supported in the congatec BIOS. To access and navigate the BIOS setup menu, press the or <F2> key during POST.

The right frame displays the key legend. Above the key legend is an area reserved for text messages. These text messages explain the options and the possible impacts when changing the selected option in the left frame.

8.2 BIOS Versions

The BIOS displays the BIOS project name and the revision code during POST, and on the main setup screen. The initial production BIOS for conga-PA7 is identified as PA70R1xx, where:

- PA7 is the project name
- R is the identifier for a BIOS ROM file
- 1 is the feature number
- xx is the major and minor revision number.

The binary size of conga-PA7 BIOS is 32 MB.

8.3 Updating the BIOS

BIOS updates are recommended to correct platform issues or enhance the feature set of the SBC. The conga-PA7 features a congatec/AMI AptioEFI firmware on an onboard flash ROM chip. You can update the firmware with the congatec System Utility. The utility has five versions—UEFI shell, DOS based command line¹, Win32 command line, Win32 GUI, and Linux version.

For more information about “Updating the BIOS” refer to the user’s guide for the congatec System Utility “CGUTLm1x.pdf” on the congatec website at www.congatec.com.



Note

¹. *Deprecated*



Caution

The DOS command line tool is not officially supported by congatec and therefore not recommended for critical tasks such as firmware updates. We recommend to use only the UEFI shell for critical updates.

8.4 Supported Flash Device

The conga-PA7 supports flash device Winbond W25R256JWPIQ (32 MB). For more information about external BIOS support, refer to the Application Note “AN7_External_BIOS_Update.pdf” on the congatec website at www.congatec.com.